



OWNER'S MANUAL

# HIGH POWER SPEAKER SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.

MODEL  
RK7



MFL71450304

1903\_Rev02

[www.lg.com](http://www.lg.com)

Copyright © 2018-2019 LG Electronics Inc. All Rights Reserved.

## Safety Information



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

**NOTICE:** For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

**CAUTION concerning the Power Cord**

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

Check the specification page of this owner's manual to be certain of the current requirements.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

This device is equipped with a portable battery or accumulator.

**How to Safely remove the batteries or the battery pack from the equipment:**

To Remove the old batteries or battery pack, follow the assembly steps in reverse order. To prevent contamination of the environment and bring on possible threat to human and/or animal health, the old batteries or the battery pack must be put in an appropriate container at designated collection points. Do not dispose of batteries or battery pack together with other waste. It is recommended that you use local, free reimbursement systems batteries or battery packs, (may not be available in your area). The batteries or the battery pack should not be exposed to excessive heat such as sunshine, fire or the like.

**CAUTION:** No naked flame sources, such as lighted candles, should be placed on the apparatus.

**Symbols**

~	Refers to alternating current (AC).
≡	Refers to direct current (DC).
⊞	Refers to class II equipment.
⏻	Refers to stand-by.
I	Refers to "ON" (power).
⚡	Refers to dangerous voltage.

# Table of Contents

## 1 Getting Started

---

- 2 Safety Information
- 6 Unique Features
- 7 Playable file Requirement
  - 7 – Music file requirement
  - 7 – Compatible USB Devices
  - 7 – USB device requirement
- 8 Remote control
- 10 Top panel
- 11 Front panel / Rear panel
- 12 How to place the unit

## 2 Connecting

---

- 14 AC Power Cord Connection
- 14 Optional Equipment Connection
  - 14 – AUX IN Connection
  - 15 – AUX OUT Connection
  - 17 – OPTICAL IN Connection
- 17 LG Sound Sync
  - 19 – USB Connection
  - 19 – Antenna Connection

## 3 Operating

---

- 20 Basic Operations
  - 20 – USB Operations
  - 21 – Selecting a folder and an MP3/WMA file
  - 22 – Deleting a file/folder or format
  - 22 – AUTO DJ
- 23 Using BLUETOOTH® wireless technology
  - 23 – Listening to music stored on the Bluetooth devices
- 26 Using the Music Flow Bluetooth App
  - 26 – About “Music Flow Bluetooth” App
  - 26 – Install “Music Flow Bluetooth” App onto Your Bluetooth Device
  - 27 – Activate Bluetooth with “Music Flow Bluetooth” App
- 28 Radio Operations
  - 28 – Listening to the radio
  - 28 – Improving poor FM reception
  - 28 – Presetting the Radio Stations
  - 28 – Deleting all the saved stations
- 29 Sound adjustment
  - 29 – Setting the sound mode
  - 30 – Setting the USER EQ

31	Advanced Operations
31	– JUKE BOX Playback
32	Other Operations
32	– Turn off the sound temporarily
32	– DEMO
32	– DRC (Dynamic range control)
32	– Using your TV remote control
33	– Using Microphone
35	– LIGHTING
36	– Sleep Timer Setting
36	– Dimmer
36	– Auto power down
37	– AUTO POWER On
38	– Auto function change
39	Setting the Clock
39	– Setting the Clock through "Music Flow Bluetooth" App
39	– Using your player as an alarm clock
40	WIRELESS PARTY LINK Connection
40	– Setting the DUAL mode
40	– Setting the MULTI mode

## 4 Troubleshooting

---

42	Troubleshooting
42	– General
42	– NOTES to release Demo mode

## 5 Appendix

---

43	General specifications
44	Trademarks and Licenses
45	Maintenance
45	– Handling the Unit

1

2

3

4

5

# Unique Features

1

Getting Started

## **BLUETOOTH®**

Listens to music stored on your **Bluetooth** device.

## **Optical In**

Listens to music from your optical device.

## **AUTO DJ**

Blends the end of one song into the beginning of another for seamless playback.

## **Music Flow Bluetooth**

Music Flow Bluetooth is an app designed to let you take control of some of LG's latest audio devices. (Page 26-27)

## **LG Sound Sync**

Controls volume level of this unit by the remote control of your LG TV that is compatible with LG Sound Sync.

## **WIRELESS PARTY LINK connection**

You can enjoy the sound with two(DUAL mode) or multiple(MULTI mode) speakers. For enjoying WIRELESS PARTY LINK, you need to purchase same speakers.

# Playable file Requirement

## Music file requirement

MP3/WMA file compatibility with this unit is limited as follows.

- Sampling frequency: within 32 to 48 kHz (MP3), within 32 to 48 kHz (WMA)
- Bit rate: within 32 to 320 kbps (MP3), 40 to 192 kbps (WMA)
- Maximum files: 2,000
- Maximum folders: 200
- File extensions: ".mp3"/ ".wma"
- Certain MP3/WMA files may not be played depending on the type or format of the file.


## Compatible USB Devices

- MP3 Player: Flash type MP3 player.
- USB Flash Drive: Devices that support USB2.0 or USB1.1.
- The USB function of this unit does not support all USB devices.


## USB device requirement

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- Do not extract the USB device while in operation.
- For a large capacity USB, it may take longer than a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/ 32) file system is supported.)
- This unit recognizes up to 2,000 files.
- External HDD, Card readers, Locked devices, or hard type USB devices are not supported.
- USB port of the unit cannot be connected to PC. The unit cannot be used as a storage device.
- Some USB may not work with this unit.

# Remote control

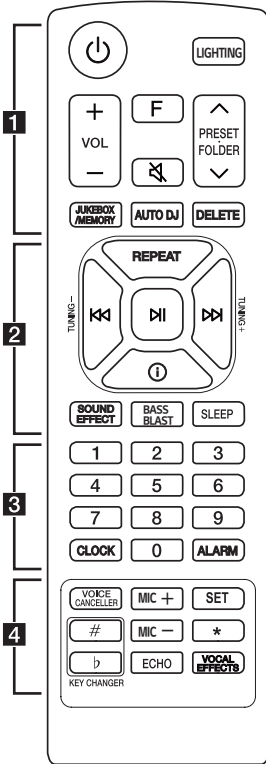

## Replacement of battery

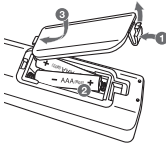

Remove the battery cover on the rear of the remote control, and insert the battery with **+** and **-** matched correctly.

.....**1**.....

**⏻** (Standby): Turns the power on or off.

**LIGHTING**: Selects the lighting mode.

**VOL** (Volume) **+/-** : Adjusts speaker volume.

**F** (Function): Selects the function and input source.

Input source / Function	Display
USB	USB
Optical	OPTICAL
LG Sound Sync (Optical)	LG OPT
AUX input	AUX
<b>Bluetooth</b>	BT
LG Sound Sync (Wireless)	LG TV
Radio	FM

**🔇** (Mute):

- Mutes the sound.
- Controls this unit using TV remote. (Page 32)

**PRESET-FOLDER  $\wedge$ / $\vee$** :

- Chooses a preset number for a radio station. (Page 28)
- Searches for a folder of MP3/WMA files. When a USB containing MP3/WMA files in several folders is being played, press **PRESET-FOLDER  $\wedge$ / $\vee$**  to select the folder you want to play.

**JUKEBOX/MEMORY**:

- Stores radio stations. (Page 28)
- Selects JUKE BOX mode. (Page 31)
- Makes JUKE BOX list.

**AUTO DJ**: Selects the AUTO DJ mode. (Page 22)

**DELETE**:

- Deletes MP3/WMA files. (Page 22)
- Deletes a song on the JUKE BOX list.
- Deletes all the saved stations.



2

**REPEAT:** Listens to your files repeatedly or randomly.

**TUNING-/+ :** Selects the radio stations.

**⏮/⏭** (Skip/Search):

- Skips backward or forward.
- Searches for a section within a file.

**⏸** (Play/Pause):

- Starts or pauses playback.
- Selects stereo/mono. (Horizon mode only).

**i** (Information):

- Sees information about your music. An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
- Sees optical source information in OPTICAL mode.
- Sees **Bluetooth** device name of the unit in BT READY.
- Sees the name of connected all **Bluetooth** device in **Bluetooth** mode.
- When these units are successfully connected each other in DUAL mode of WIRELESS PARTY LINK, each of connected device names appears in the each unit.

**SOUND EFFECT:** Chooses sound impressions.

**BASS BLAST** (or **BASS BLAST+**): Select BASS (or BASS+) effect directly.

**SLEEP:** Sets the system to turn off automatically at a specified time.  
(Dimmer: The display window will be darkened by half.)

3

**0 to 9** numerical buttons: Selects numbered files or preset number.

**CLOCK:** Sets a clock and checks a time.

**ALARM:** With the ALARM function you can turn on USB play and tuner reception at a desired time.

4

**VOICE CANCELLER:** You can reduce the vocal tones during music playback from various input sources.

**MIC +/- :** Adjusts microphone volume.

**SET:** Confirms the setting.


**KEY CHANGER(#/b):** Changes the key to suit your vocal range.

**ECHO:** Selects ECHO mode.

**VOCAL EFFECTS:** Selects various vocal effects mode.

**\***: The button is not available.

# Top panel

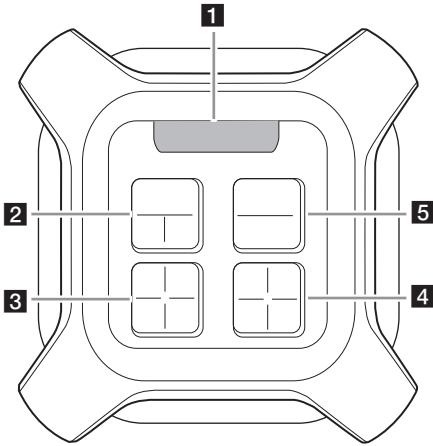

**1** Display window

**2** (Standby)  
Turns the power on or off.

**DUAL**

Connects two speakers for DUAL mode in WIRELESS PARTY LINK.

**MULTI**

Connects multiple speakers for MULTI mode in WIRELESS PARTY LINK.

**Note**

The unit might not synchronize between audio and video in DUAL/MULTI mode.

**3** **F** (Function)

- Selects the function and input source.
- Press and hold to select the PARTY LINK with AUX.

(Play/Pause)

- Starts or pauses playback.
- Selects stereo/mono (Horizon mode only).

(Skip/Search)

- Skips backward or forward.
- Searches for a section within a file.
- Selects the radio stations.

**4** **AUTO DJ**

Selects the AUTO DJ mode.

**USER EQ / DEMO**

- Selects the sound effect created by your own.
- In power off status, if you press **USER EQ / DEMO**, show DEMO mode.

**SOUND EFFECT / BASS BLAST (or BASS BLAST+)**

- Chooses sound impressions.
- Press and hold to select BASS (or BASS+) effect directly.

**LIGHTING**


Selects the lighting mode.

**5** **+/-** (Volume)

Adjusts speaker volume.

Input source / Function	Display
USB	USB
Optical	OPTICAL
LG Sound Sync (Optical)	LG OPT
AUX input	AUX
<b>Bluetooth</b>	BT
LG Sound Sync (Wireless)	LG TV
Radio	FM

## Front panel / Rear panel

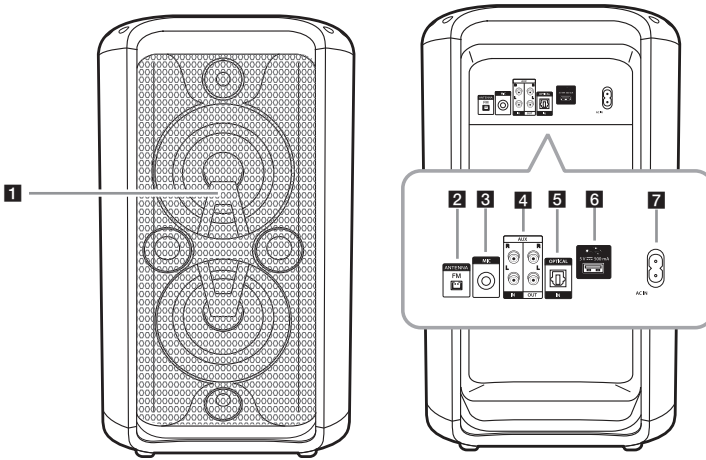

**1** Remote sensor

**2** FM ANTENNA

**3** MIC (Microphone) jack

**4** AUX IN / OUT (L/R)

**5** OPTICAL IN

**6** USB port

**7** AC IN socket

## How to place the unit


1

### Automatically optimize the sound


It helps to automatically optimize the sound to suit the installation conditions (Horizontal or Vertical).

If the installation method is changed ('Horizontal → Vertical' or 'Vertical → Horizontal'), it is indicated by 'VERTICAL MODE' or 'HORIZON MODE' in the display panel.

#### Horizontal

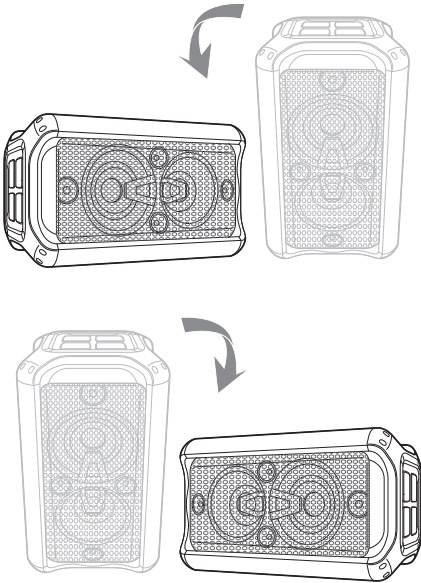

#### Vertical

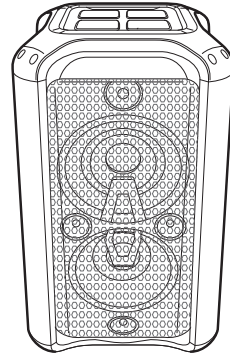







#### ! Note

On the horizon mode, press **▶** to change the tuner from mono to stereo.

#### ! Caution


- Do not sit on the unit or push the unit. Otherwise it may result in malfunction and causing personal injury and/ or property damage.
- Do not place the unit on an unstable position and place the unit at a safe distance from the child's reach.
- Be careful that the unit should not fall down. Otherwise it may result in malfunction and causing personal injury and/ or property damage.
- Watch out for the foot when you lay the unit horizontally.

## Useful functions for using the unit

Function	Description	To do	Do this
TV Remote On/Off (Page 32)	It allows you to control the volume of this unit by your TV remote control even by other company's product.  Initial setting of this function was set to on.	ON	Press and hold  on the remote control for 3 seconds in Optical function.
		OFF	Press and hold  on the remote control for 3 seconds in Optical function.
BT Lock On/Off (Page 25)	It allows you to connect a <b>Bluetooth</b> device only on BT ( <b>Bluetooth</b> ) and LG TV functions.  Initial setting of this function was set to off.	ON	Press and hold  for 5 seconds in BT ( <b>Bluetooth</b> ) function.
		OFF	Press and hold  for 5 seconds in BT ( <b>Bluetooth</b> ) function.
Auto Power On (Page 37)	It allows the unit to turn on automatically by input signals: Optical, LG TV or BT ( <b>Bluetooth</b> ).	ON	Turn off the unit by pressing  on the unit for 5 seconds.
		OFF	Turn off the unit by pressing  on the unit for 5 seconds.

## AC Power Cord Connection

1. Connect one end of the AC power cord (included) to the AC IN socket.

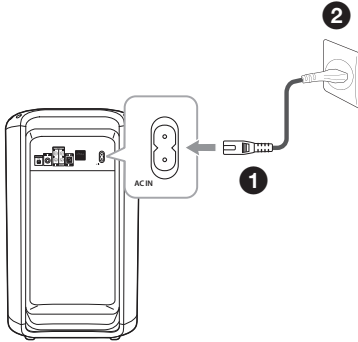

2. Plug the other end into the wall outlet.

### Note


Unplug the AC power cord from the wall outlet if you do not use for an extended period of time.

## Optional Equipment Connection

### AUX IN Connection

Connect an output of auxiliary device (Camcorder, TV, Player, etc) to the **AUX IN** (L/R) connector.

If your device has only one output for audio(mono), connect it to the left (white) audio jack on the unit.

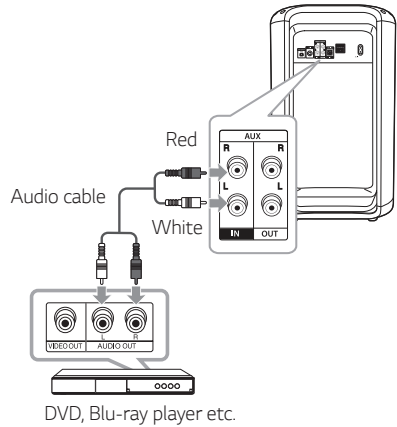


DVD, Blu-ray player etc.

## AUX OUT Connection

Connect an input of auxiliary device to the **AUX OUT** (L/R) connector:

If your device has only one input for audio (mono), connect it to the left (white) audio jack on the unit.

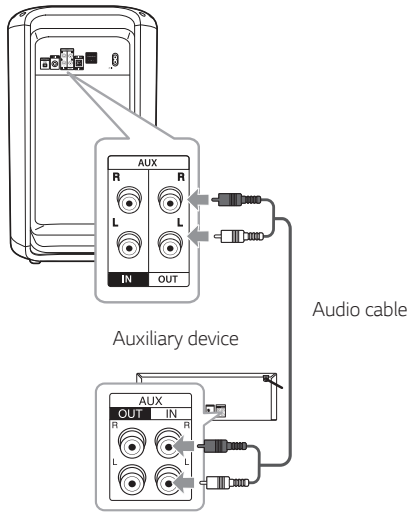

## PARTY LINK with AUX

You can connect two units to play music together.


1. Connect **AUX OUT** (L/R) connector on a unit to the **AUX IN** connector on the other unit using audio cable.
2. Press and hold **F** connected through AUX OUT. "ON - DELAY " appears in the display window and change to "DELAY time" soon.
3. Press **KKI/ΔΔI** to adjust delay setting. When "ON - DELAY" and "DELAY time" are displayed in the display window, you can adjust the delay time.
4. Press **F** to save the delay setting.

### ! Note

- This function is not available on LG TV function.
- The initial delay is 30 ms. If you want to change the Delay time, press **KKI/ΔΔI**. The connected device's delay may differ. If Audio Sync is not matched, adjust delay of PARTY LINK with AUX to synchronize sound.
- It is available to adjust the delay from 0 ms to 200 ms. Synchronizing tempo is not available depending on the devices.
- Delay value is saved and PARTY LINK with AUX is turned off when the unit turns off.
- You can select ON - DELAY / OFF - DELAY mode by pressing and holding **F**.
- In case of the microphone, delay setting is not applied.

## Listening to music from your external device


The unit can be used to play music from many types of external device.

1. Connect the external device to the **AUX IN** connector of the unit.
2. Turn the power on by pressing .
3. Press **F** to select AUX function.
4. Turn on the external device and start it playing.



## OPTICAL IN Connection

1. Connect an optical output jack of external devices to the OPTICAL IN jack.

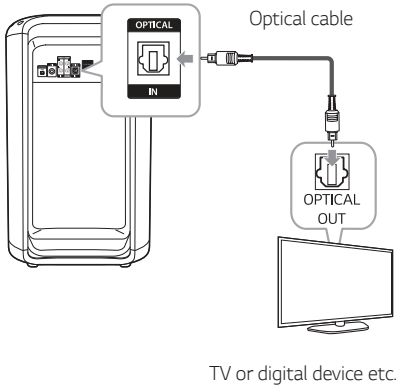

2. Press **F** until OPTICAL function is selected.

### ! Note

- Before connecting the optical cable, be sure to remove the protection plug cover if your cable has the cover.
- You can enjoy the TV audio through the speakers of this unit. In the case of some TV models, you must select the external speaker option from the TV menu. (For details, reference your TV user manual.)
- Set up the sound output of TV to listen to the sound through this unit:  
TV setting menu → [Sound] → [TV Sound output] → [External speaker (Optical)]
- Details of TV setting menu vary depending on models of your TV.

## LG Sound Sync


**Sound Sync**  
Wireless

You can control some functions of this unit by your TV's remote control with LG Sound Sync. It is compatible with LG TV that supports LG Sound Sync. Make sure your TV has the LG Sound Sync logo.

Controllable function by LG TV's remote control:  
Volume up/down, mute.


Refer to the TV's instruction manual for the details of LG Sound Sync.

### LG Sound Sync with wired connection


1. Connect your LG TV to the unit by using an optical cable.
2. Set up the sound output of TV to listen to the sound through this unit:  
TV setting menu → [Sound] → [TV Sound output] → [LG Sound Sync (Optical)]
3. Turn on the unit by pressing .
4. Press **F** until OPTICAL function is selected.

You can see "LG OPT" on the display window if connecting normally between this unit and your TV.

## LG Sound Sync with wireless connection


1. Turn on the unit by pressing .
2. Press **F** until LG TV function is selected.
3. Set up the sound output of TV to listen to the sound through this unit:  
TV setting menu [Sound] → [TV Sound output] → [LG Sound Sync (Wireless)]  
"PAIRED" appears on the display window for about 3 seconds and then you can see "LG TV" on the display window if the TV and this unit are connected normally.

### Note

- You can also use the remote control of this unit while using LG Sound Sync. If you use TV's remote control again, the unit synchronizes with the TV. (According to TV Specifications, the volume and mute of this unit synchronize with TV.)
- If the connection fails, check the conditions of this unit and your TV: power, function.
- Make sure of the condition of this unit and the connection in the cases below when using LG Sound Sync.
  - The unit is turned off.
  - Changing to a different function.
  - Disconnecting the wireless connection caused by interference or a distance.
  - Disconnecting the optical cable.
- The amount of time to turn off this unit is different depending on your TV.
- If you try to change the function on using the LG TV function, volume will be change according to the LG TV volume level.
- Details of TV setting menu vary depending on models of your TV.
- If you turned off the unit directly by pressing , LG Sound Sync will be disconnected. To use this function again, you should reconnect the TV and the unit.
- The volume may be increased when the TV and this unit is connected by LG Sound Sync. Decrease the TV volume and then connect with this unit.
- When you turn on your LG TV connected by LG Sound Sync or enter LG TV function, this unit changes the function to LG TV automatically.
- You should set the TV Sound output manually depending on the TV version.
- If you control TV volume when this unit and TV are connected by LG Sound Sync, this unit may louder the volume due to synchronizing volume with TV's.

## USB Connection

Connect a USB device (or MP3 player, etc.) to the USB ports on the unit.

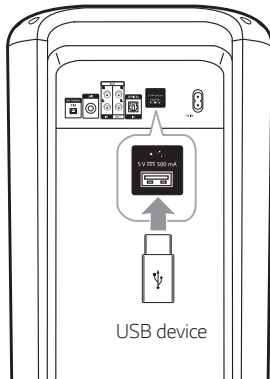

### ! Note


Removing the USB device from the unit:

1. Choose a different function/mode.
2. Remove the USB device from the unit.

## Antenna Connection

Connect the supplied FM antenna for listening to the radio.

Connect the FM wire antenna to the FM antenna connector.

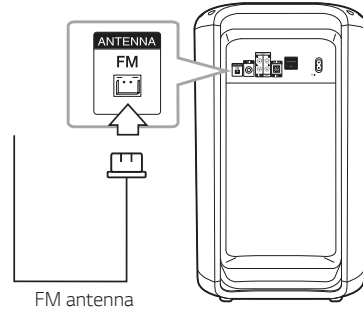

### ! Note

Be sure to fully extend the FM wire antenna.

# Basic Operations

## USB Operations

1. Connect the USB device to the USB port.
2. Select USB function by pressing F.

To	Do this
Playback	Press <b>▶▶</b> .
Pause	Press <b>⏸</b> during playback.
Searching for a section within a file	Press and hold <b>⏮/▶▶</b> during playback and release it at the point you want to listen to.
Selecting a file directly	Press <b>0</b> to <b>9</b> numerical buttons on the remote control to go to the desired file directly.
Skipping to the next/previous file	Press <b>▶▶</b> to go to the next file. Playing in less than 3 seconds, press <b>⏮</b> to go to the previous file. Playing after 3 seconds, press <b>⏮</b> to go to the beginning of the file.
Playing repeatedly or randomly	Press <b>REPEAT</b> on the remote control repeatedly. Refer to the note for details about the display change.

### ! Note

- Repeat/Shuffle playback operates as follows.

On Display	Description
OFF	Plays songs in order and stops the playback.
ONE	Plays a same song repeatedly.
FOLDER	Plays songs in a folder repeatedly.
ALL	Plays all the songs repeatedly.
SHUFFLE	Plays all the songs once randomly, and stops the playback.


- When you play JUKE BOX list, only ONE and ALL are available.
- Even after restarting the unit or switching one function to another, you can listen to music from the point where it's last been played.

## Selecting a folder and an MP3/WMA file

1. Press **PRESET-FOLDER**  $\wedge/V$  repeatedly until a desired folder appears.
2. Select the file you want by using **KK/▷▷**.
3. Press **▶|** to play it. The first file of folder will be played.

### ! Note

- USB Folders/Files are recognized as below.

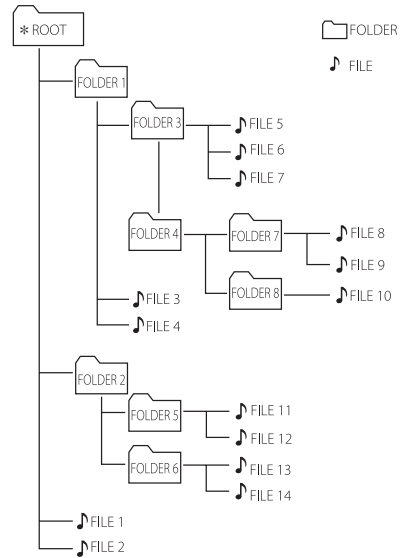

- If there is no file in a folder, the folder will not appear.
- Folders will be presented as the following order:  
 ROOT → FOLDER 1 → FOLDER 3 →  
 FOLDER 7 → FOLDER 8 → FOLDER 5 →  
 FOLDER 6
- File will be played from  $\blacktriangle$  file No.1 to  $\blacktriangle$  file No.14 one by one.
- Files and folders will be presented in order recorded and may be presented differently according to the record circumstances.

\*ROOT: The first screen you can see when a computer recognize the USB is "ROOT".

## Deleting a file/folder or format

You can delete file, folder on your USB or format the USB.

1. Select USB function by pressing **F**.
2. Press **DELETE** on the remote control repeatedly, the display changes as followings.

DEL FILE → DEL DIR → FORMAT

On Display	Description
DEL FILE	Select the file you want to delete.
DEL DIR	Select the folder you want to delete.
FORMAT	Select to format the USB device.

If you want to exit the current mode, press **DELETE** repeatedly until "FORMAT" appears, and then press **DELETE** once again.

3. To delete file/folder or format, press and hold **DELETE** on the remote control.



### Caution

- Do not extract the USB device during operation. (play, delete, etc.)
- Regular back up is recommended to prevent data loss.
- The delete function may not be supported according to the USB status. (lock, etc.)

## AUTO DJ

Auto DJ blends the end of one song into the beginning of another for seamless playback. It equalizes volume across files for uninterrupted playback.

SHUFFLE → SEQUENTIAL → OFF

On Display	Description
OFF	-
SHUFFLE	The music is played randomly on this mode.
SEQUENTIAL	The music is played repeatedly on this mode.



### Note

- AUTO DJ mode does not support searching for a section within a file or to play repeatedly or randomly.
- If you move to other functions on AUTO DJ mode, AUTO DJ will be disabled.
- AUTO DJ is not supported in the music file whose length is less than 60 seconds.
- Only SEQUENTIAL is selected when played JUKE BOX list.

# Using BLUETOOTH® wireless technology

## About Bluetooth

**Bluetooth** is wireless communication technology for short range connection.

The sound may be interrupted when the connection interfered by the other electronic wave or you connect the **Bluetooth** in the other rooms.

Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology.

- Available Devices: Smart phone, MP3, Notebook, etc.
- Version: 4.2
- Codec: SBC, AAC, AptX, AptX HD

## Bluetooth Profiles

In order to use **Bluetooth** wireless technology, devices must be able to interpret certain profiles. This unit is compatible with following profile.

A2DP: (Advanced Audio Distribution Profile)

# Listening to music stored on the Bluetooth devices

## Pairing your unit and Bluetooth device

Before you start the pairing procedure, make sure the **Bluetooth** feature is activated on your **Bluetooth** device. Refer to your **Bluetooth** device's user guide. Once a pairing operation is performed, it does not need to be performed again.

1. Turn on the unit.



### Note

When **Bluetooth** connection lock is activated, you can search **Bluetooth** device in BT function.

2. Operate the **Bluetooth** device and perform the pairing operation. When searching for this unit with the **Bluetooth** device, a list of the devices found may appear in the **Bluetooth** device display depending on the type of **Bluetooth** device. Your unit appears as "LG RK7 (XX)":



### Note

- XX means the last two digits of **Bluetooth** address. For example, if your unit has a **Bluetooth** address such as 9C:02:98:4A:F7:08, you will see "LG RK7 (08)" on your **Bluetooth** device.
- Depending on the **Bluetooth** device type, some devices may have a different pairing process. Enter the PIN code (0000) as needed.
- You can connect this unit with up to 2 **Bluetooth** devices simultaneously using the same method as described above, only in the **Bluetooth** function.
- The multi phone pairing connection is only supported on Android devices. (Multi phone pairing connection may not be supported depending on the connected device specifications.)
- Removable/detachable **Bluetooth** devices (Ex: Dongle etc.) will not support multi phone pairing.

3. When this unit is successfully connected with your Bluetooth device, "PAIRED" appears on the display window and change to **Bluetooth** device name soon. Then "BT" will appear on the display window.

### ! Note

- "PAIRED" will momentarily appear on the display when you connect other devices for multi phone pairing.
- If the device name is unavailable, "\_" will be displayed.

4. Listen to music.  
To play a music stored on your **Bluetooth** device, refer to your **Bluetooth** device's user guide.

### ! Note

- When using **Bluetooth** technology, you have to make a connection between the unit and the **Bluetooth** device as close as possible and keep the distance.  
However, it may not work well in certain situations as described below:
  - There is an obstacle between the unit and the **Bluetooth** device.
  - There is a device using same frequency with **Bluetooth** technology such as a medical equipment, a microwave or a wireless LAN device.
- If **Bluetooth** connection does not work well, try pairing it again.
- Even if this unit is connected to up to 2 **Bluetooth** devices in the **Bluetooth** mode, you can play and control music by using only one of the connected devices.
- When using AptX HD codec-enabled devices in multi phone pairing, the AptX HD codec transcodes to lower than AptX HD codec.
- When multi phone pairing connection is completed, some mobile phones (ex. AptX HD supported devices) will play music after a brief pause.

### ! Note

- The sound may be interrupted when the connection has interference from other electronic devices.
- Depending on the type of the device, you may not be able to use the **Bluetooth** function.
- You can enjoy wireless system using phone, MP3, Notebook, etc.
- The more distance between the unit and the **Bluetooth** device, the lower the sound quality becomes.
- **Bluetooth** connection will be disconnected when the unit is turned off or the **Bluetooth** device gets too far from the unit.
- When **Bluetooth** connection is disconnected, connect the **Bluetooth** device to the unit again.
- When a **Bluetooth** device is not connected, "BT READY" appears on the display window.
- When you use the **Bluetooth** function, adjust the volume to a proper level on the **Bluetooth** device.
- When you connect **Bluetooth** device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized with each other.
- **Bluetooth** connection will be disconnected when you change the **Bluetooth** function to some other function. In "Music Flow Bluetooth" app connection, only one device which you are playing keeps **Bluetooth** connection. You can control the **Bluetooth** device with this unit but you cannot use sound output.
- When entering the **Bluetooth** function, this unit automatically connects to the last connected **Bluetooth** device or the device which played back last.  
(Auto connection may not be supported depending on the connected device specifications.)



## Controls connected Bluetooth device

You can control connected **Bluetooth** device by the unit; play, pause, skip.



### Note

- Only Android OS and iOS is available to use this function.
- This function may not be supported depending on the **Bluetooth** device, or operated differently.

## Bluetooth connection lock (BT LOCK)

You can limit **Bluetooth** connection to only BT (**Bluetooth**) and LG TV function to prevent unintended **Bluetooth** connections.

To turn this function on, press and hold **DI** for about 5 seconds in BT (**Bluetooth**) function.

“ON-BT LOCK” appears and you can limit **Bluetooth** connection.

To turn this function off, press and hold **DI** for about 5 seconds in BT (**Bluetooth**) function.

“OFF-BT LOCK” appears.



### Note

Even if you set up **Bluetooth** connection lock to On, this unit turns on by Auto Power function. Turn off Auto Power function to prevent it.

## Using the Music Flow Bluetooth App

### ! Note

- Only Android OS is available to use “Music Flow Bluetooth” app with this unit.
- It is recommended to use the latest version of app.

## About “Music Flow Bluetooth” App

“Music Flow Bluetooth” app brings a suite of new features to this unit.

To enjoy more features, you are recommended to download and install free “Music Flow Bluetooth” app.

Below introduces you to a few of the many features of “Music Flow Bluetooth” app.

**Multi Juke box** : Your entertainment increases three fold when you connect up to 2 Bluetooth phones at the same time. Play music from both phones and create a customized playlist from all phones.

## Install “Music Flow Bluetooth” App onto Your Bluetooth Device

There are two ways to install “Music Flow Bluetooth” app onto your **Bluetooth** device.

### Install “Music Flow Bluetooth” App through QR code

1. Install “Music Flow Bluetooth” app through QR code. Use the scanning software to scan the QR code.



2. Tap an icon for installation.

### ! Note

- Make sure that your **Bluetooth** device is connected to the Internet.
- Make sure that your **Bluetooth** device has a scanning software application. If you don't have one, download one from “Google Android Market (Google Play Store)”.
- Depending on the area, QR code may not work.

## Install “Music Flow Bluetooth” App through “Google Android Market (Google Play Store)”

1. Tap the “Google Android Market (Google Play Store)” icon.
2. In the search bar, type in the “Music Flow Bluetooth” and search it.
3. In the search result list, find and tap “Music Flow Bluetooth” to start downloading **Bluetooth** app.
4. Tap an icon for installation.
5. Tap an icon for downloading.

### ! Note

- Make sure that your **Bluetooth** device is connected to the Internet.
- Make sure that your **Bluetooth** device is equipped with “Google Android Market (Google Play Store)”.

## Activate Bluetooth with “Music Flow Bluetooth” App

“Music Flow Bluetooth” app helps to connect your **Bluetooth** device to this unit.

1. Tap “Music Flow Bluetooth” app icon on the home screen to open “Music Flow Bluetooth” app, and go to the main menu.
2. If you want to get more information to operate, tap [Setting] and tap [Help] menu.

### ! Note

- “Music Flow Bluetooth” app will be available in the software version as follow;
  - Android O/S: Ver 4.0.3 (or later)
- If you use “Music Flow Bluetooth” app for operation, there would be some differences between “Music Flow Bluetooth” app and the supplied remote control. Use the supplied remote control as necessary.
- Depending on the **Bluetooth** device, “Music Flow Bluetooth” app may not work.
- After connection of “Music Flow Bluetooth” app, music may be output from your device. In this case, try connecting procedure again.
- If you operate the other applications or change the settings on your **Bluetooth** device while using “Music Flow Bluetooth” app, “Music Flow Bluetooth” app may operate abnormally.
- When “Music Flow Bluetooth” app operates abnormally, check your **Bluetooth** device and the connection of “Music Flow Bluetooth” app and then try to connect again.
- Depending on the smart phone's operating system, you have some differences for “Music Flow Bluetooth” operation.
- Check **Bluetooth** setting on your **Bluetooth** device if “Music Flow Bluetooth” app connection does not work well.

## Radio Operations

Be sure that FM antenna is connected. (Page 19)

### Listening to the radio

1. Press **F** until FM appears in the display window. The last received station is tuned in.
2. Auto tuning:  
Press and hold **TUNING -/+** on the remote control or **⏮/⏭** on the unit for about two seconds until the frequency indication starts to change, then release. Scanning stops when the unit tunes in a station.

Or

Manual tuning:

Press **TUNING -/+** on the remote control or **⏮/⏭** on the unit repeatedly.

3. Adjust the volume by pressing **VOL +/-**.

### Improving poor FM reception

Press **⏮**. This will change the tuner from stereo to mono and usually improve the reception (Horizon mode only).

## Presetting the Radio Stations

You can preset 50 stations for FM.

Before tuning, make sure to turn down the volume.

1. Press **F** until FM appears in the display window.
2. Select the desired frequency by pressing **TUNING -/+** on the remote control or **⏮/⏭** on the unit.
3. Press **JUKEBOX / MEMORY** on the remote control. A preset number will blink in the display window.
4. Press **PRESET-FOLDER ^/V** on the remote control to select the preset number you want.
5. Press **JUKEBOX / MEMORY** on the remote control. The station is stored.
6. Repeat steps 2 to 5 to store other stations.
7. To listen a preset station, press **PRESET-FOLDER ^/V** or **0** to **9** numerical buttons on the remote control.

## Deleting all the saved stations

1. Press **DELETE** on the remote control. "DEL ALL" will flash up on the unit display.
2. Press **DELETE** on the remote control to erase all the saved radio stations. "DELETED ALL" will scroll on the unit display.

## Sound adjustment

### Setting the sound mode

This system has a number of pre-set surround sound fields. The displayed items for the equalizer may be different depending on sound sources and effects.

You can select a desired sound mode by using **BASS BLAST** (or **BASS BLAST+**) on the remote control or **SOUND EFFECT / BASS BLAST** (or **BASS BLAST+**) on the unit.

#### Note

- On some speakers, sound may not be heard or heard in low sound depending on the sound mode.
- By pressing **BASS BLAST** (or **BASS BLAST+**) on the remote control or pressing and holding **SOUND EFFECT / BASS BLAST** (or **BASS BLAST+**) on the unit, you can directly select **BASS** (**BASS BLAST**) or **BASS+** (**BASS BLAST+**) effect.

On Display	Description
BASS (BASS BLAST) or BASS+ (BASS BLAST+)	Reinforces the bass and powerful sound.
POP CLASSIC ROCK JAZZ	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock, pop, jazz or classic concert.
STANDARD	You can enjoy optimized sound.

## Setting the USER EQ

You can adjust the sound level of Bass, Middle and Treble as your preference.

1. Press **USER EQ / DEMO** on the unit. "USER EQ" is displayed.
2. Press **USER EQ / DEMO** on the unit repeatedly until desired setting appears in the display window.
3. Press + or - to adjust the value on the unit.

# Advanced Operations

## JUKE BOX Playback

JUKE BOX function enables you to make a playlist of your favorite files from a USB device. A playlist of up to 100 files can be entered.

### Making JUKE BOX list

1. Press and hold **JUKEBOX/MEMORY** on the remote control to enter the edit mode. (Playing will be stopped when you press **JUKEBOX/MEMORY** on the remote control.)
2. Select a file by pressing **◀▶** on the remote control.
3. Press **JUKEBOX/MEMORY** on the remote control to save the file.
4. Repeat steps 2 - 3 to store other files. (You can modify the list by pressing **PRESET-FOLDER ▲/▼** on the remote control to select the JUKE BOX program number.)
5. Press **JUKEBOX/MEMORY** on the remote control once again.

To play the JUKE BOX list, press **▶** on the remote control after you make the list.

#### Note

When making or modifying the JUKE BOX list, REPEAT mode is off.

### Enjoying JUKE BOX

Press **JUKEBOX/MEMORY** on the remote control once. "ON - JUKEBOX" appears on the display window.

To play JUKE BOX list, press **▶** on the remote control.

To cancel it, press **JUKEBOX/MEMORY** on the remote control once. "OFF - JUKEBOX" appears on the display window.

### Editing JUKE BOX

1. Press and hold **JUKEBOX/MEMORY** on the remote control to enter the edit mode. (Playing will be stopped when you press **JUKEBOX/MEMORY** on the remote control.)
2. Press **PRESET-FOLDER ▲/▼** on the remote control to select a file to edit.
3. Press **◀▶** on the remote control.
4. Press **JUKEBOX/MEMORY** on the remote control.
5. Repeat 2 to 4 to store the other files.
6. Press **JUKEBOX/MEMORY** on the remote control once again.

To play the JUKE BOX list, press **▶** on the remote control after you edit the list.

### Deleting JUKE BOX list

Deleting function works in the edit mode.

1. Press and hold **JUKEBOX/MEMORY** on the remote control to enter the edit mode.  
Or

Press **DELETE** on the remote control while JUKE BOX is played to enter the edit mode.

2. Select a song by pressing **PRESET-FOLDER ▲/▼** on the remote control repeatedly.
3. Press **DELETE** on the remote control while a song is selected.

#### Note


- If there is no JUKE BOX list, "NO PROG" appears on the display window when you press **JUKEBOX/MEMORY** on the remote control.
- JUKE BOX is switched off in the case below.
  - Changing to a different function.
  - Turning the unit off and on.
  - Operating the numerical buttons on the remote control.
- JUKE BOX list is cleared in the case below.
  - Removing the USB device.
  - Deleting music files in the USB device.

## Other Operations

### Turn off the sound temporarily

Press  on the remote control to mute your sound.

You can mute your unit, for example, to answer the telephone, the "MUTE" will appear in the display window.

To cancel it, press  on the remote control again or change the volume level.

### DEMO

In the power off state, press **USER EQ / DEMO** on the unit once. The unit will power on and display the each of functions with demo sound in the display window.

To cancel the DEMO function, press **USER EQ / DEMO** on the unit once more.

#### Note

You can enjoy other functions during the DEMO, the DEMO will temporarily pause.

- Without input key in 10 sec, the DEMO will playback automatically.

### DRC (Dynamic range control)

Make the sound clear when the volume is turned down and prevent a sudden sound increase (Dolby Digital only).

Press  in OPTICAL function to turns on or off this function.


On Display	Description
ON-DRC	DRC function is turned on.
OFF-DRC	DRC function is turned off.

#### Note

This function only operates on OPTICAL function.

## Using your TV remote control

You can control some functions of this unit by your TV remote control even by other company's product. Controllable functions are volume up/down and mute.

Press and hold  on the remote control for about 3 seconds in OPTICAL function to turn on or off this function.

On Display	Description
ON-TV REMOTE	TV REMOTE function is turned on.
OFF-TV REMOTE	TV REMOTE function is turned off.

#### Note

- Supported TV brands

LG	Panasonic	Philips	Samsung
Sharp	Sony	Toshiba	Vizio

- Make sure that the sound output of your TV is set to [External speaker].
- Depending on the remote control, this function may not work well.
- This function does not operate on LG TV's magic remote control.
- This function only operates on the OPTICAL function.



## Using Microphone

1. Connect your microphone to the MIC jack.
2. Play the music you want.
3. Sing along with the accompaniment.  
Adjust the microphone volume by pressing **MIC +/-** on the remote control.

### ! Note

- When not using the microphone, set the MIC volume to minimum or turn off the MIC and remove the microphone from the MIC jack.
- If the microphone is set too near the speaker, a howling sound may be produced. In this case, move the microphone away from the speaker or decrease the sound level by using the **MIC +/-** on the remote control.
- If sound through the microphone is extremely loud, it may be distorted. In this case, press **MIC -** on the remote control.
- You can give an echo effect to the sound from the microphones by pressing **ECHO** on the remote control.
- MIC function does not operate on OPTICAL or LG OPT function.

## VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

Press **VOICE CANCELLER** on the remote control and "ON - VOICE CANCELLER" will appear in display window.

To cancel it, press **VOICE CANCELLER** on the remote control again.

The quality of the VOICE CANCELLER may be different depending on the recording conditions of the music files.

### ! Note

- This function is available in the USB or BT (**Bluetooth**) function.
- If the function is not available, "NOT SUPPORT" appears in the display window.
- This function is available to use only when a microphone is connected.
- If a microphone is not connected, "INSERT MIC" appears in the display window.
- It is not available on the mono source.
- To initialize it, change the function or disconnect the microphone.
- This function may not be initialized depending on the status of connected devices.

## KEY CHANGER

You can adjust the key to 9 steps (4 steps higher, 4 steps lower and the original key).

- To make the key more sharp, one by one, press **KEY CHANGER(#)** on the remote control repeatedly during playback.
- To make the key more flatten, one by one, press **KEY CHANGER(b)** on the remote control repeatedly during playback.

### ! Note

- This function is available in the USB or BT (**Bluetooth**) function.
- To initialize it, change the function, disconnect the microphone or change the music.
- This function may not be initialized depending on the status of connected devices.
- If the function is not available, "NOT SUPPORT" appears in the display window.
- If a microphone is not connected, "INSERT MIC" appears in the display window.

## VOCAL EFFECTS

When you connect your microphone to the MIC jack, you can enjoy karaoke function by changing voice in the various source.

To select various vocal mode effects, pressing **VOCAL EFFECTS** repeatedly on the remote control when vocal effects mode appears in the display window.

BASS → SOPRANO → HELIUM → ROBOT →  
 DUET MAN → DUET WOMAN → BASS ECHO1  
 → SOPRANO ECHO1 → HELIUM ECHO1  
 → ROBOT ECHO1 → DUET MAN1 → DUET  
 WOMAN1 → BASS ECHO2 → SOPRANO  
 ECHO2 → HELIUM ECHO2 → ROBOT ECHO2  
 → DUET MAN2 → DUET WOMAN2 → OFF

### ! Note

- If a microphone is not connected, "INSERT MIC" appears in the display window.
- If you press **KEY CHANGER** or **ECHO** on the remote control on VOCAL EFFECTS mode, after backing up current VOCAL EFFECTS, turn off VOCAL EFFECTS mode and operate KEY CHANGER or ECHO mode.
- To turn off VOCAL EFFECTS mode, press and hold **VOCAL EFFECTS** on the remote control.

## ECHO

When you connect your microphone to the MIC jack, you can give an echo effect to the sound from the microphones by pressing **ECHO** on the remote control.

ECHO 1 → ECHO 2 → ECHO OFF

### Note

- If a microphone is not connected, "INSERT MIC" appears in the display window.
- If you press **VOCAL EFFECTS** button on ECHO mode, after backing up current ECHO, turn off ECHO mode and operate VOCAL EFFECTS mode.  
To operate ECHO mode, press **ECHO** on the remote control again, after backing up current VOCAL EFFECTS.

## LIGHTING

This function offers a party atmosphere by operating the lighting on the unit.

To select mode, press **LIGHTING** repeatedly.

- In the normal mode  
PARTY → WATER → FOREST → (MY STYLE) → OFF
- In the WIRELESS PARTY LINK (DUAL or MULTI) mode  
RHYTHM → PARTY → FIREWORK → SPACE → WATER → FOREST → CITYGLOW → (MYSTYLE) → OFF ...

### Note

- Lighting function is available in all functions.
- Lighting mode retains in its previous mode when you first press **LIGHTING**, press again to change modes.
- If you want to use MYSTYLE, you have to register a source with "Music Flow Bluetooth" app.
- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the **LIGHTING**.
- To turn off LED lightning, press and hold **LIGHTING** for 3 seconds.

## Sleep Timer Setting

Press **SLEEP** on the remote control repeatedly to select delay time between 10 and 180 minutes. After the delay time, the unit will be turned off.

To cancel the sleep function, press **SLEEP** on the remote control repeatedly until "OFF" appears.

### ! Note

- You can check the remaining time before the unit is turned off. Press **SLEEP** on the remote control to check or change the remaining time.
- You can edit the remain time when the remaining time or "DIMMER" is displayed.

## Auto power down

This unit will turn itself off to save electricity in the case were the main unit is not connected to an external device and is not used for 15 minutes. The unit will also turns itself off after six hours if the main unit has been connected to another device using the analog inputs.

## Dimmer

Press **SLEEP** on the remote control once. The display window will be darkened by half.

To cancel it, press **SLEEP** on the remote control repeatedly until "OFF" appears.

### ! Note


All the lighting turns off when dimmer is being operated.

## AUTO POWER On

This unit automatically turns on by an input source: LG TV, **Bluetooth** or Optical.

When you turn on your TV connected to this unit, this unit recognizes the input signal and selects the suitable function. You can hear the sound from the unit.

If you try to connect your **Bluetooth** device, this unit turns on and connects your **Bluetooth** device. You can play your music.

When you turn off this unit by pressing  on the unit for 5 seconds each time, you can turn on or off the AUTO POWER function.

On Display	Description
ON-AUTO POWER	AUTO POWER function is turned on.
OFF-AUTO POWER	AUTO POWER function is turned off.

### Note

- Depending on the connected device, this function may not operate.
- Depending on the connected device, the unit turns on but **Bluetooth** function may not be connected.
- If you disconnect **Bluetooth** connection by this unit, some **Bluetooth** devices try to connect to the unit continually. Therefore it is recommended to disconnect the connection before turning off the unit.
- If you try to connect to the "Music Flow Bluetooth" app, **Bluetooth** function of this unit is turned on.
- If you turn on the unit using LG TV or **Bluetooth** function, proper function of this unit is turned on.
- If you have already paired with this unit, this unit can automatically turn on by an input source when this unit is turned off.
- If you turned off the unit directly, it cannot be turned on automatically by AUTO POWER function. However the unit can be turned on by AUTO POWER function when an optical signal comes in after 5 seconds of no signal.

## Auto function change

This unit recognizes input signals such as Optical, **Bluetooth**, LG TV and then automatically changes to the suitable function.

### When you try to connect Bluetooth device

When you try to connect your **Bluetooth** device to this unit, **Bluetooth** function is selected. Play your music on the **Bluetooth** device.

### When optical signal comes in

When you turn on the external device connected to this unit by an optical cable, this unit changes the function to optical. You can hear the sound from your device.

### When LG TV signal comes in

When you turn on your LG TV connected by LG Sound Sync (Wireless connection), this unit changes the function to LG TV. You can hear the sound from your TV.



#### Note

- This function is not available during deleting.
- This function only works with devices that were previously connected.
- If the **Bluetooth** connection lock function is set, **Bluetooth** and LG TV connection will be only available on **Bluetooth** and LG TV function.
- To change to optical function, it needs 5 seconds of no signal.
- LG Sound Sync (Optical) changes the same as OPTICAL function.

## Setting the Clock

1. Turn the unit on.
2. Press and hold **CLOCK** on the remote control.
3. Select time mode by pressing **⏮/⏭** on the remote control.
  - AM 12:00 (for an AM and PM display) or 0:00 (for a 24 hour display)
4. Press **SET** on the remote control to confirm your selection.
5. Select the hours by pressing **⏮/⏭** on the remote control.
6. Press **SET** on the remote control.
7. Select the minutes by pressing **⏮/⏭** on the remote control.
8. Press **SET** on the remote control.

## Setting the Clock through “Music Flow Bluetooth” App

Install “Music Flow Bluetooth” app on your Android device. (Page 26-27)

Your unit’s clock will be automatically synchronized with your device by activating **Bluetooth** connection through “Music Flow Bluetooth” app.

## Using your player as an alarm clock

1. Turn the unit on.
2. Press and hold **ALARM** on the remote control.
3. Press **⏮/⏭** on the remote control to change the hours and minutes and press **SET** on the remote control to save.
4. Press **⏮/⏭** on the remote control to select function and press **SET** on the remote control to save.
  - Press **⏮/⏭** on the remote control to select a preset number when you select tuner and then, press **SET** on the remote control.
  - If there is no preset number, this step is skipped.
5. Press **⏮/⏭** on the remote control to change the volume and press **SET** on the remote control to save.


### ! Note

- If you set the clock time, you can check the time by pressing **CLOCK on the remote control** even when the player is turned off.
- You can set alarm after you set the clock time.
- If you set the clock time and alarm, you can check the alarm setting information by pressing **ALARM** on the remote control even when the unit is turned off.
- You can select ALARM ON/OFF mode by pressing **ALARM** on the remote control.

## WIRELESS PARTY LINK Connection

### Setting the DUAL mode

You can enjoy the sound by using two speakers. For enjoying WIRELESS PARTY LINK, you need to purchase same speaker.

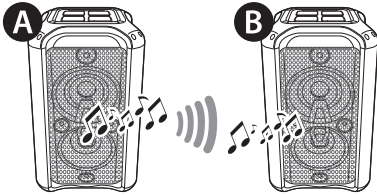

1. Press **F** to select BT(**Bluetooth**) function.
2. Press **DUAL** on the unit.  
"ROLE SELECT" appears in display window.
3. Press **DUAL** repeatedly or press **KK** / **DD** to select LEFT or RIGHT.
  - **A** unit: Selects LEFT.
  - **B** unit: Selects RIGHT.
4. When these units are successfully connected to each other, each of connected device names appears in the each unit.


#### ! Note

- After connection is completed, if you press **MULTI** button, DUAL mode connection is canceled. Then the unit enters MULTI mode connection.
- Connection is canceled when **DUAL** button is pressed during connecting in DUAL mode.
- If you press and hold **DUAL** button in DUAL mode, LEFT and RIGHT is switched.

### Setting the MULTI mode

You can enjoy the sound with multiple speakers. For enjoying WIRELESS PARTY LINK, you need to purchase same speakers.

It is compatible with unit that supports WIRELESS PARTY LINK.

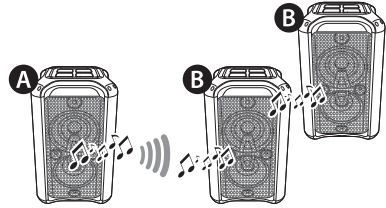

1. Press **F** to select BT(**Bluetooth**) function.
2. Press **MULTI** on the unit.  
"ROLE SELECT" appears in display window.
3. Press **MULTI** repeatedly or press **KK** / **DD** to select MAIN or OTHER.
  - **A** unit: Selects MAIN.
  - **B** unit: Selects OTHER.
4. When these units are successfully connected each other, MAIN speaker displays "BT READY" and OTHER speaker displays "OTHER".
5. Repeat steps 1 - 2 and select OTHER to add speaker you want.

#### ! Note

- After connection is completed, if you press **DUAL** button, MULTI mode connection is canceled. Then the unit enters DUAL mode connection.
- MAIN unit scanning is canceled when **MULTI** button is pressed during MAIN unit scanning in MULTI mode.
- Connection is canceled when **MULTI** button is pressed during OTHER connecting in MULTI mode.
- If you want to exclude connected OTHER speaker from a group, power off or switch the function on the OTHER speaker you want to exclude.



### ! Note

- This function only operates on BT(**Bluetooth**) function.
- Time-out takes up to 1 minute to connect to WIRELESS PARTY LINK.
- If the connection has failed, "FAILED" appears in the display window.
- WIRELESS PARTY LINK connection will be disconnected when you turn off the unit.
- When WIRELESS PARTY LINK is connected, you can not connect PARTY LINK with AUX.
- You can use microphone in the MAIN and OTHER unit but sound is output only from the connected unit.
- Sound of MAIN unit and OTHER unit may be different depending on playback status or source.
- Functions are synchronized in DUAL, MULTI mode as shown below.

MODE	Function
<b>DUAL MODE</b> (Bi-directional synchronization with LEFT and RIGHT)	Power off
	Volume
	Mute
	Play/Pause
	Skip
	Sound Effect
	Lighting
<b>MULTI MODE</b> (Unidirectional synchronization to OTHER)	Power off
	Mute
	Lighting

### ! Note

- Check the following information when connecting to **Bluetooth**.
  - You can connect only one **Bluetooth** device in the MAIN unit. You cannot connect **Bluetooth** device to the OTHER unit.
  - Removable/detachable **Bluetooth** devices (ex. Dongle etc.) will not support WIRELESS PARTY LINK connection.
  - If you connect WIRELESS PARTY LINK while you are playing connected **Bluetooth** device, it may be reconnected again, depending on phone specification.
- WIRELESS PARTY LINK connection is only supported on Android devices.

# Troubleshooting

## General

Problem	Cause & Solution
The unit does not work properly	<ul style="list-style-type: none"> <li>• Turn off the power of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and turn them on again.</li> <li>• Disconnect the power cord of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and then try connecting again.</li> <li>• Previous setting may not be saved when device power is shut off.</li> </ul>
No Power	<ul style="list-style-type: none"> <li>• The power cord is not plugged in. Plug in the power cord.</li> <li>• Check whether electricity failed. Check the condition by operating other electronic devices using the same AC outlet.</li> </ul>
No sound	<ul style="list-style-type: none"> <li>• Check whether you select right function. Press function button and check if you have selected the right function.</li> </ul>
Radio stations cannot be tuned in properly	<ul style="list-style-type: none"> <li>• The antenna is positioned or connected poorly. Connect the antenna securely.</li> <li>• The signal strength of the radio station is too weak. Tune to the station manually.</li> <li>• No stations have been preset or preset stations have been cleared (when tuning by scanning preset channels). Preset some radio stations, see page 28 for details.</li> </ul>
The remote control does not work properly	<ul style="list-style-type: none"> <li>• The remote control is too far from the unit. Operate the remote control within about 7 m(23 feet).</li> <li>• There is an obstacle in the path of the remote control and the unit. Remove the obstacle.</li> <li>• The batteries in the remote control are exhausted. Replace the batteries with new ones.</li> </ul>
LG Sound Sync does not work	<ul style="list-style-type: none"> <li>• Check whether your LG TV supports LG Sound Sync.</li> <li>• Check connection of LG Sound Sync.</li> <li>• Check sound setting of your TV and this unit.</li> </ul>

## NOTES to release Demo mode


Problem	Cause & Solution
Can not change input source with 'F' key such as BT (Bluetooth), USB etc. and only DEMO mode is showing in the display.	<ul style="list-style-type: none"> <li>• Press 'DEMO' Key on the unit for 15 seconds.</li> </ul>
Remote Control does not work properly.	

## General specifications

General	
Power requirements	Refer to the main label on the unit.
Power consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 345 mm x 650 mm x 345 mm (Approx. 13.6 inch x 25.6 inch x 13.6 inch)
Operating temperature	5 °C to 35 °C (41° F to 95° F)
Operating humidity	60 %

Inputs / Outputs	
Digital audio in (OPTICAL IN)	3.3 V (p-p), Optical jack x 1
Analog audio in (AUX IN)	1.2 Vrms (1 kHz, -4 dB), RCA jack (L, R) .
Analog audio out (AUX OUT)	2.0 Vrms (1 kHz, 0 dB), RCA jack (L, R)
Microphone (MIC)	Sensitivity 20 mV (1 kHz), 6.3 mm jack

Tuner	
FM Tuning Range	87.5 to 108.0 MHz or 87.50 to 108.00 MHz

System	
Frequency Response	80 to 20,000 Hz
Signal-to-noise ratio	More than 75 dB
Dynamic range	More than 80 dB
Bus Power Supply (USB)	5 V  500 mA

Amplifier (RMS Output power)	
Total output	550 W RMS
Front	275 W RMS x 2 (3 Ω at 1kHz, 20 % THD)

- Design and specifications are subject to change without notice.

## Trademarks and Licenses

All other trademarks are trademarks of their respective owners.

---



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

---



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

---



The **Bluetooth®** word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

---

# Maintenance

## Handling the Unit

### When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

### Keeping the exterior surfaces clean

Do not use volatile liquids such as insecticide spray near the unit. Wiping with strong pressure may damage the surface. Do not leave rubber or plastic products in contact with the unit for a long period of time.

### Cleaning the units

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

