



Instruction Manual
Please read carefully before use and keep for future reference.

Thank You

We know you have many choices when it comes to technology; thank you for choosing us here at Naxa Electronics. Established in 2001 in Los Angeles, California, we are dedicated to delivering products that entertain and delight.

We trust that you will be happy with your purchase. Please read this manual carefully and save it for reference. You may also find the latest FAQ, documentation, and other product material at our website. Come visit us on the web at www.naxa.com and see all that we have to offer!

In the Box

Please take a moment to make sure that you have everything in the list below. Although we make every effort to ensure that each Naxa device is securely packed and sealed, we know a lot can happen in between us and you. If anything is missing, check back with your local retailer to get immediate assistance. If they cannot help you, please contact our Naxa Support team at www.naxa.com/naxa_support.

- Bluetooth[®] speaker unit
- USB battery pack
- Headphones
- Earphones
- USB charge cable
- 3.5mm AUX cable

Bluetooth[®] Speaker

Connecting Power

Your speaker can be powered by the included rechargeable battery. Upon initial use, the battery should be charged fully to ensure optimal performance and battery life.

Installing the Battery:

1. Remove the cover of the battery compartment on the speaker.
2. Place the rechargeable battery (BL-5C) in the battery compartment, taking care to match the +/- poles of the battery with the markings in the compartment.
3. Replace the cover of the battery compartment.

Charging the Battery

Use the included USB cable to connect the speaker to a USB power source to charge the battery.

- Connect the small end of the cable to the USB charge port of the unit.
- Connect the large end of the cable to a high-power USB port of a computer. The computer should be powered on.

i The round DC 5V power input requires an optional power adapter and is not used.

! The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the battery. Do not leave the battery in a place subject to direct sunlight, or in a car with its windows closed.

Do not connect the unit to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Turning the Speaker On/Off

To turn the speaker on, set the ON/OFF switch to the "ON" position. The LED will light up blue.

To turn the speaker off, set the ON/OFF switch to the "Off" position.

Pairing a Device with Bluetooth[®]

A device must be paired with the speaker before using them together for the first time.

When you turn on the speaker, it will automatically search for a paired device. If it does not detect a paired device, it will switch to Pairing mode. Then:

1. Make sure Bluetooth[®] is enabled on your device. Enable it if it hasn't.
2. Use your device to search for available Bluetooth devices. (This function is usually in the Bluetooth settings menu; refer to your device's instruction manual to learn more.)
3. The speaker will announce itself as **NAXA NAS-3061A**. Select it from the list of devices.

4. If your device asks for a passcode, use "0000" to complete the pairing process.

i If the speaker fails to pair with your device: 1) Turn the speaker off; 2) Make sure Bluetooth has been enabled on your device; 3) Turn the speaker on again; 4) Use your Bluetooth device to search for and pair with the speaker.

The speaker cannot be paired with more than one device at a time.

When the speaker is connected to a Bluetooth[®] device, use the connected device to control playback and to adjust the volume to a comfortable level.

Using the AUX Input Connector

Connect devices without Bluetooth[®] by using the AUX connection. A 3.5mm stereo patch cable is required to make this connection.

1. Use the included AUX cable to connect the device's headphone or line-out jack to the LINE IN (AUX) connector on the speaker.

 
2. Turn on the device and the speaker.

3. Adjust the device volume to a comfortable level and then start playback.

i Use the connected AUX device to control all functions in AUX mode. The speaker can only be used to adjust the volume.

USB Battery Pack

At a Glance

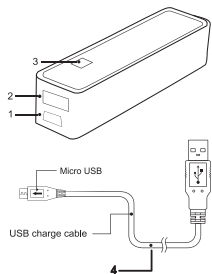

1. Micro USB port: Power input. Use this port to charge the battery pack with the included USB charge cable.
2. USB port: Power output. Use this port to charge other devices with the USB cable provided by the device's manufacturer.
3. Status LED: Lights up to show the current status of the battery pack.
4. USB charge cable: Use the USB charge cable to connect the battery pack to a USB power source.

Charging the Battery Pack

Use the included USB cable to connect the speaker to a USB power source to charge the battery.

- Connect the small end of the cable to the micro USB charge port of the unit.
- Connect the large end of the cable to a high-power USB port of a computer or other USB power source.

The Status LED will light red while the battery pack is charging; the LED will turn off when the battery pack is fully charged.

i Fully charge the battery pack for at least 5 hours when using the battery pack for the first time.

! The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the battery. Do not leave the battery in a place subject to direct sunlight, or in a car with its windows closed.

Do not connect the unit to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Using the Battery Pack to Charge Your Devices

Use the cable included with your device to charge it.

- Connect the end that goes into your device as usual.
- Connect the large end of the cable to the large USB port of the battery pack.

i For optimal performance, fully charge the battery pack before using it to charge another device.

Care and Maintenance

Please read and follow the recommendations below when using the Portable USB Battery Pack.

- Do not expose the device to liquid, moisture, or humidity. This may adversely affect the device's internal circuit.
- Do not use abrasives or solvents to clean the device.

- Do not expose the device to extremely high or low temperatures as it may damage the device or deform the plastic parts of the device.
- Do not incinerate the device to dispose of it as it may cause an explosion.
- Do not allow the device to come into contact with sharp objects to prevent scratches or other damage.
- Do not drop the device or subject it to any strong shocks or other impact. This may damage the internal circuit of the device.
- Do not attempt to disassemble the device. There are no user-serviceable parts inside.

Troubleshooting Guide

This guide lists common problems and their solutions. Please refer to this guide before requesting service. If you need further assistance, please contact Naxa Technical Support (www.naxa.com/naxa_support/).

Bluetooth[®] Speaker

Symptom	Possible Cause	Possible Solution
There is no power.	The battery is exhausted.	Connect the unit to a USB power source to charge it.
	The speaker hasn't been turned on.	Set the ON/OFF switch on the speaker to the "ON" position.
The device is unable to connect to the speaker.	The speaker is not in pairing mode.	Reset the speaker (turn it off and then on again.) Wait for the status indicator to flash quickly.
	Bluetooth may be disabled on your device.	Make sure Bluetooth is enabled on your device. Turn it on if it isn't.


Symptom	Possible Cause	Possible Solution
The device is connected but there is no sound.	The AUX connector may be in use.	Disconnect all cables from the AUX input connector of the speaker.
	Your device may be beyond the effective range of the speaker.	Move closer to the speaker. Range may be affected adversely by environmental conditions.
	Your device may not be in playback mode.	Ensure that your device is operating correctly. Start playback on your device.

Symptom	Possible Solution
The battery pack is not charging a connected device.	Ensure that the USB cable is connected securely to the battery pack and to the device. Make sure the battery pack is fully charged before attempting to charge another device.

USB Battery Pack

Symptom	Possible Solution
The status LED does not light up while charging the battery pack.	Ensure that the battery pack is securely connected to a power source with the included USB charge cable. If the power source is a computer, make sure the computer is turned on.

 Warnings and Precautions

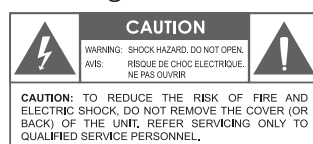

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of significant magnitude to constitute risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

CAUTION

- Do not block the ventilation openings or holes.
- Do not place any naked flames (such as lit candles) on the apparatus.
- When discarding batteries, follow all local rules and laws governing the disposal of batteries. Consider the environmental impact of your actions!
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

9. Ventilation: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.

10. Power Sources: This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.

 
11. Grounding or Polarization: This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.

12. Power-Cord Protection: Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.

13. Protective Attachment Plug: The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.

14. Outdoor Antenna Grounding: If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide

some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure; grounding of the lead-in wire to an antenna-discharge unit; size of grounding conductors; location of antenna-discharge unit; connection to grounding electrodes, and requirements for the grounding electrode (see figure).

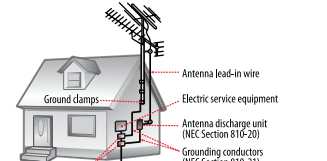

15. Lightning: For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.

16. Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to

17. Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

18. Object and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

19. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

20. Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.

21. Replacement Parts: When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

22. Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.

23. Wall or Ceiling Mounting: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24. Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

WARNING: This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. **Wash Hands after handling.**

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

Trademark & Regulatory Statements

Bluetooth[®] is a registered trademark of Bluetooth SIG, Inc. Other trademarks and names are those of their respective owners.

Specifications

Portable Bluetooth[®] Stereo Speakers

Speakers	Two 50mm full-range drivers
Frequency Response	100–20,000 Hz
Input	Bluetooth [®] 3.5mm AUX line-in
Power	Rechargeable battery (500 mAh) USB charge port (DC 5V, 1A)
Battery Life*	1.33 hours

* Estimated time based on Bluetooth use at 100% volume; battery life will vary depending on use conditions.

Headphones

Drivers	40 mm neodymium
Type	Dynamic, closed
Frequency Response	20–20,000 Hz
Impedance	32 Ω
Sensitivity	108 dB
Cord	1.3 m
Plug	3.5mm stereo

Earphones

Drivers	15 mm
Type	Dynamic, In-ear
Frequency Response	20–20,000 Hz
Impedance	32 Ω
Sensitivity	102 dB
Cord	1.15 m
Plug	3.5mm stereo

Portable USB Battery Pack

Capacity	2,200 mAh
Charge connector	USB
Power	Output: DC 5V, 1A Input: DC 5V, 1A

Note: Product are improved continuously. We reserve the right to modify the product and specifications without prior notice.

Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

NAXA Technical Support
2320 East 49th St.
Vernon, CA 90058

http://www.naxa.com/naxa_support/

订单号: EC160708381A

型号: 53127BT

印刷及材质要求: 80G书纸黑白色

尺寸: 560*100mm

美工: Jinglin