



## Crest Sentry II™ Door Alarm

4701, 4702 and 4702L

### Typical Installation

1. Open unit and place back panel against door frame so that the ball switch is depressed when door is closed.
2. Fasten back panel with 2 screws furnished with unit.
3. Install 9V battery. Slide door alarm front case down over the alarm back plate. Fasten with screw through bottom lip of the back plate.
4. Activate alarm by turning the key.
5. For models 4702 & 4702L alarm will sound when the door is opened. Alarm will continue to sound after the door has closed. For model 4701 the alarm will stop after door has closed.
6. Silence alarm with key, (except for model 4701).
7. Re-activate alarm by turning key on.
8. To replace battery, remove screws on side of unit. Slide alarm front case up and off of back plate. The battery will be exposed for easy replacement with a standard 9V battery.

### Specifications

#### ELECTRICAL

**Current and Voltage Rating:** 9VDC from standard battery

#### MECHANICAL

**Alarm Switch:** Momentary roller ball type  
**Switch:** Key operated on/off switch  
**Sounder:** Solid state piezoelectric type  
**Circuit:** Solid state latching design: 4702 & 4702L  
Non-Latching design: 4701

**MATERIAL:** 400 series stainless steel

**SIZE:** 4.6"H x 2.9"W x 1.5"D

**MOUNTING:** Snaps into stainless steel bracket