
Instruction Manual

Hand-hydraulic Stacker

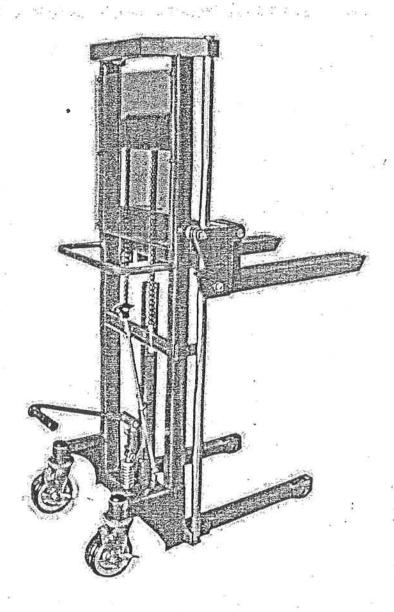

Model: HYDRA-15

Note: Owner/Operator must read and understand this

HYDRA-15 HAND-HYDRAULIC STACKER

1. Brief Instruction

This Stacker is a multi-function transport and loading products, which designed on the base of HYD-5 and HYD-10. It is a convertible vehicle using for lifting and transporting in workshop, warehouse and wharf, etc, which can reduce labor intensity and improve the produce efficiency, and a good tool for safe loading.

2. Data Base

Model HYDRA-15

Rate Capacity 800kg (1760lbs)

Lowest Height 90mm

Max. Height 1600mm

Fork Length 800mm
Fork Width 585mm


Net Weight 180kg

3. Using

- 1) Please test the stacker before using. Step the foot pedal rod to lift the fork to the max position and check the discharge valve.
- 2) Please fix the stacker and brake the wheel before loading
- 3) Please load the goods in the rate capacity of the stacker
- 4) Turn the handwheel (knob) to lower down the fork, and keep the discharge valve open.

4. Warning!

- (1) Operate strictly according to the instruction manual.
- (2) Do not use the cart on slop.
- (3) Do not allow people to sit or ride on the cart.
- (4) Keep feet and hand away from under the lowering fork.
- (5) No permit to put the foot on the foot pedal of the wheel when the fork lowering down.
- (6) The goods much be put on the correct position.
- (7) Do not move the heavy goods when the fork or platform on the high position.
- (8) No permit loading excess its rate capacity.
- (9) Mistake using will bring out damage to the personal or property.

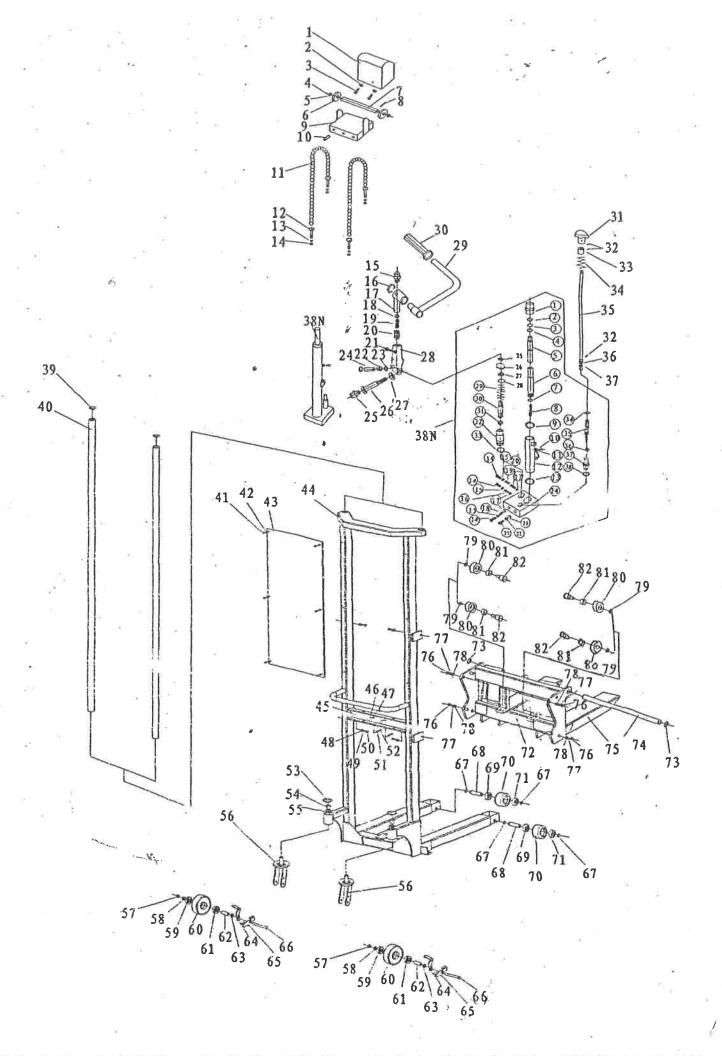

HYDRA-15 HAND HYDRAULIC STACKER

	· ILLI				ANDITION		1 [0"	Γ_{ν}
No.	Description	Q't	у	No.	Description	Q'ty	1			cription	Q't	\neg
1	Chain Wheel Cover	1	1	41	Round Screw	6	1	81	1	Oil Bearing	4	\neg
2	Spring Washer	-4	4	42	Rubber Washer	6	11	82	-	ler Guide Shaft	4	\neg
3	Semicircle Screw	4		43	Organic Glass	1	1			Nut	$-\frac{1}{1}$	\neg
4	Hex Cap Bolt	2		44	Cart Holder	1	1	(2)	1	st Cover	$\frac{1}{1}$	\neg
5	Flat Washer	2		45	Nut	2	41	(3)				
6	Chain, Wheel	2		46	Spring Washer	2	4	(4)	-	Seal		
7	Chain Wheel Shaft	1		47	Flat Washer	2	1	(5)	_	t Piston		
8	Spring Column Pin	1		48	Flat Washer	4	4	(6)	In	ner Cylinder Body		1
9	Chain Wheel Seat	12.		49	Spring Washer	4	4	(7)	W	asher		1
10	Set Bolt		1	50	Hex Cap Bolt	4		(8)	Fl	ter		1
11	Chain		2	51	Flat Washer	2		(9)	w	asher		1
12			2	52	Hex Cap Bolt	2		(10) H	ex Cap Plug		1
13			2	53	Dust Cover	2		(11) 0	-ring		1
14			2	54	Big Nut	2		(12	2) 0	uter Cylinder Body		1
15		\top	1	55	Big Spring Washer	2		(13) W	asher		1_
16		_	1	56	Wheel Holder	2		(14) H	ex Cap Plug		1
17		+	1	57	Nut	2		(1:	5) 0	-ring	7	1
18		+	1	58	Separate Cover	2		(1	s) s	pring		1
19	7 (5 200)	- L	1	59		2		(1	7) S	teel Ball		1
		\neg	1	60		2		(1	8) S	pring		1
20		_	1	61		2		(1	9) S	pring		1
2			1	62		2		(2	0) (0	Column Plug		1
2		\dashv	1	63		2).	(2	21)	Hex Cap Plug		1
2		+	1	64		2	2	(2	(2)	O-ring		1
	Shaft	-	1	65		2	2	1 (2	23)	Lowering Valve		1
_	25 Oil Mouth		1	1 66			2	110	24)	Valve		1
	26 Shaft		1	6			2	1		C-ring		1
	Nut	-	-	6			2	11-		Spring Seat		1
	28 Foot Pedal Holder		1	6			2	\neg	-	Dust Cover	a a	ŀ
	29 Foot Pedal		1	-	0 Small Wheel		2	ヿー	_	O-ring		
-	30 Foot Pedal Cover		1	\dashv			2	-11-		Big Spring		
	31 Hex Handwheel		1	-	1 Bearing		1	-11-	_	Small Lift Piston		
	32 Set Screw		2		2 Move Block		2	\neg		Oil Seal		
-	33 Spring Set Cover		1		3 C-ring		1	\dashv		Pump Cylinder		
-	34 Turn Spring		1		4 Long Shaft		2	\neg	-	O-ring		
	35 Straight Rod		1		75 Fork		_	\dashv		O-ring		Г
	36 Upper Joint Cover		1		76 Nut		4	-11	-	Close Cover		Г
-	37 Down Joint Cover		1		77 Spring Washer		4	-11	(35) (36)			
	38N Cylinder	-	1		78 Flat Washer		4	-11	(36)			-
	39 Top Nut	Ø.	2		79 Separate Cover		4	1		Close Cover		1
1	40 Slide Post	-	1 2		80 Roller Guide		4		(38)	Nylon Washer		1