


STEP 1 MOUNT PEDESTAL TO CONCRETE SLAB IN DESIRED ORIENTATION. SLAB TO BE 30" MINIMUM SQUARE AND 6" MINIMUM THICK (BY OTHERS). PLUMBING CAST IN CONCRETE MUST FIT IN 7" DIAMETER AREA CENTERED UNDER PEDESTAL LOCATION.


SHOWN. USE 1/4" FLAT HEAD SCREWS (SUPPLIED) TO INSTALL PLATE. USE 3/8" BOLTS AND NUTS (SUPPLIED) AND TORQUE TO 18 FT-LBS TO INSTALL ARM.

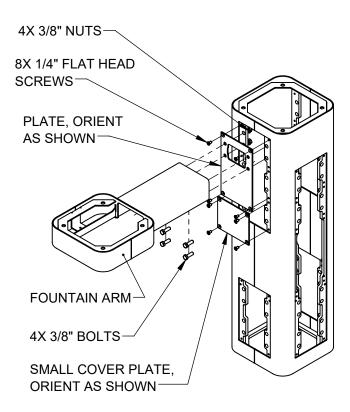

# INSTALLATION INSTRUCTIONS




STEP 3
INSTALL REMAINING ARM ON LEFT SIDE AS SHOWN.
USE 1/4" FLAT HEAD SCREWS (SUPPLIED) TO INSTALL
PLATES. USE 3/8" BOLTS AND NUTS (SUPPLIED) AND
TORQUE TO 18 FT-LBS TO INSTALL ARM.

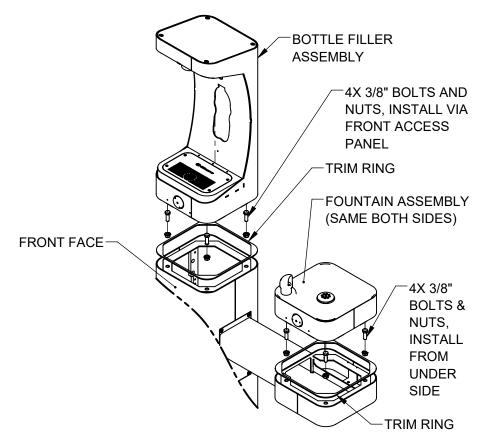

PLACE SQUARE TRIM RING ON BOTTOM OF BOTTLE FILLER AND PLACE BOTTLE FILLER ON TOP OF PEDESTAL, FACING THE FRONT. USE 3/8" BOLTS AND NUTS VIA THE FRONT ACCESS PANEL TO SECURE BOTTLE FILLER TO PEDESTAL. PLACE TRIM RING AND INSTALL FOUNTAINS ON ARMS AS SHOWN. CAREFULLY CENTER BOTTLE FILLER, FOUNTAIN, AND TRIM RINGS, THEN TORQUE BOLTS/NUTS TO 18 FT-LBS



## INSTALLATION INSTRUCTIONS

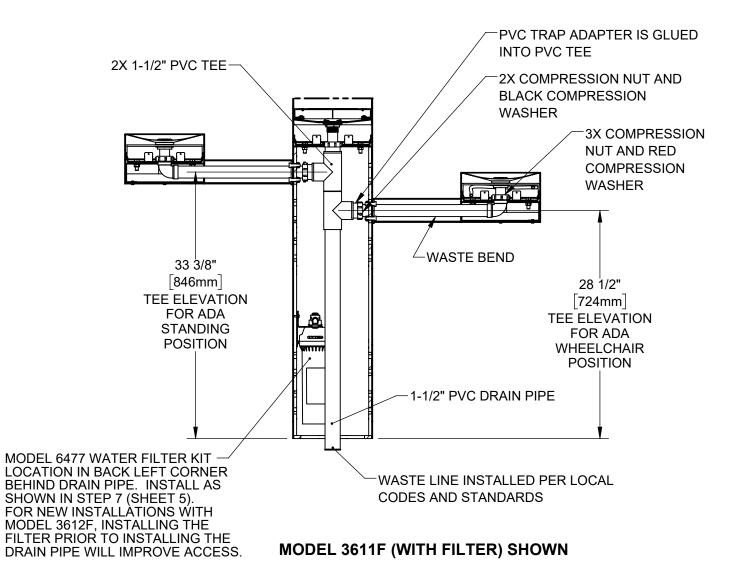

#### STEP 5

INSTALL SUPPLIED DRAIN COMPONENTS AS SHOWN. RED COMPRESSION WASHERS ADAPT FROM 1-1/4" TO 1-1/2" AT EACH DRAIN TAIL PIECE. BLACK COMPRESSION WASHERS ARE USED IN TRAP ADAPTERS AT TEES. USE APPROPRIATE PVC CEMENT TO MAKE SOLVENT CEMENT CONNECTIONS. TRIM WASTE BEND AND/OR TAIL PIECE LENGTH IF REQUIRED. NOTE THAT EXTRA PARTS MAY BE INCLUDED TO FACILITATE OTHER CONFIGURATIONS OF THIS FOUNTAIN.




1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAWS@HAWSCO.COM

> 2 SHEET 4 OF 6

REV. ECN: BY: DP DP DP MODEL(S)
3612 & 3612 F PRIT NUMBER
0580001180.D
REVISION REVISION

 APPROVED:
 DATE:

 FV
 09/16/21
 SCALE:
 1:24
 DRAWING TYPE:
 INSTALLATION
 SIZE: A

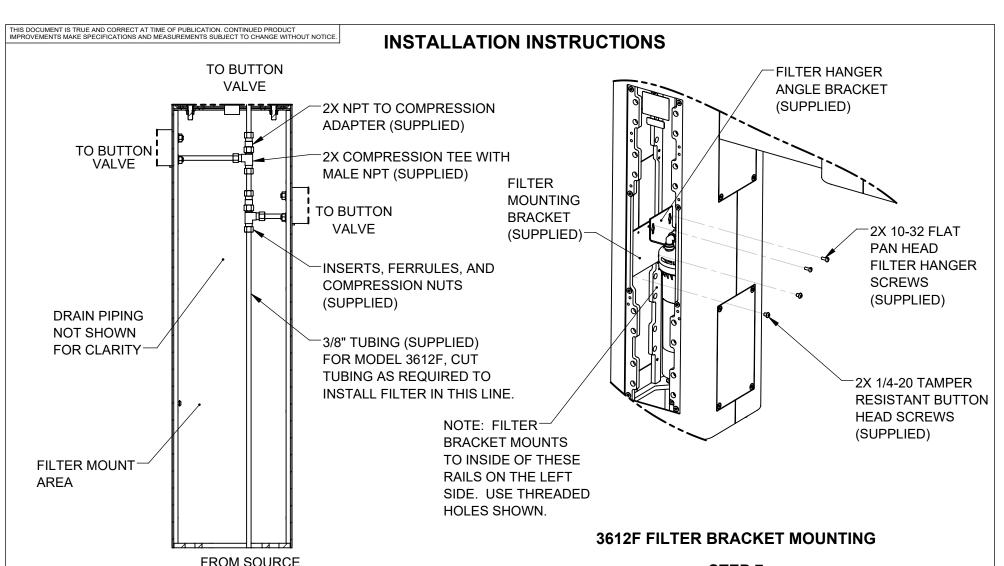

## **3612 SUPPLY PLUMBING**

## STEP 6

COMPLETE WATER SUPPLY PLUMBING AS SHOWN. OPEN SUPPLY VALVE(S) AND TEST. REPLACE ARM BOTTOM PLATES AND PEDESTAL ACCESS PLATES.

## STEP 7

INSTALL FILTER MOUNTING BRACKET (SUPPLIED WITH MODEL 6477)
TO LEFT INSIDE VERTICAL RAILS USING 2 BUTTON HEAD SCREWS
AS INDICATED ABOVE. INSTALL FILTER HEAD ON HANGER ANGLE WITH
4 SUPPLIED SELF-TAPPING SCREWS. INSTALL FILTER HANGER ANGLE
BRACKET IN RIGHTMOST HOLES AS SHOWN. SEE MODEL 6477 OPERATION
AND MAINTENANCE MANUAL FOR ADDITIONAL DETAILS.



#### NOTES ON OPTIONAL CONFIGURATIONS

HAWS 3600/3600F SERIES OUTDOOR FOUNTAINS ARE MODULAR AND CAN BE ASSEMBLED AND CONFIGURED MANY DIFFERENT WAYS. DISPLAYED HERE ARE A FEW EXAMPLES. CONFIGURATIONS OTHER THAN THAT SHOWN IN THE INSTALLATION INSTRUCTIONS FOR THE 3612/3612F MAY AFFECT COMPLIANCE WITH ADA REGULATIONS. IT IS THE RESPONSIBILITY OF THE INSTALLER TO UNDERSTAND LOCAL, STATE, AND FEDERAL REGULATIONS AS APPLICABLE IF INSTALLING THIS FOUNTAIN IN CONFIGURATIONS OTHER THAN THAT INDICATED ON SHEET 1 (PAGE 6 OF 11).

