

MAASDAM POWERLIFT™

OPERATION & SAFETY MANUAL

3 TON (6,000 LBS.) SUV, LIGHT TRUCK AND AUTOMOBILE JACK STANDS

1-888-797-7855
MAASDAM.COM

Meets or Exceeds ANSI/ASME PALD -2005 Parts 4 - Vehicle Support Stands

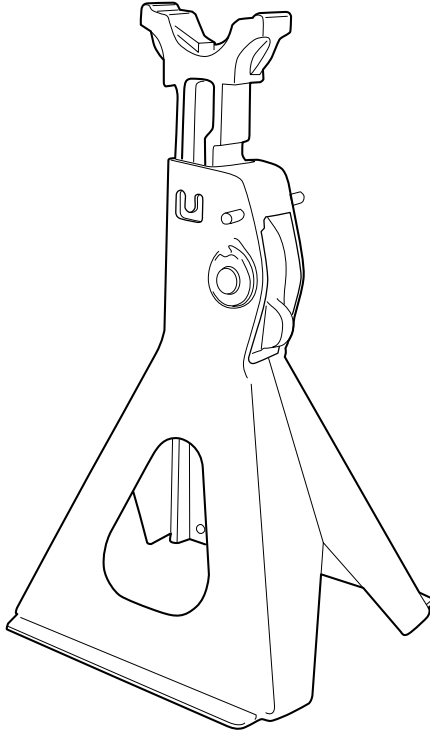 


Table of Contents

Safety Information.....	2
Warranty.....	2
Pre-Operation.....	3
Before Assembly and Operation.....	3
Operating Instructions.....	3
To Position Jack Stands.....	5
To Remove Jack Stands.....	5
Owner And/Or Operator Responsibilities.....	4



CAUTION: Read, understand and follow all Safety Rules and Operating Instructions in this manual before using this product.

 


WARNING: This product can expose you to di(2-ethylhexyl) phthalate (DEHP), which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.


Safety Instructions

READ AND SAVE THESE INSTRUCTIONS

- Study, understand and follow all instructions before operating this device. Do not exceed rated capacity. Use only on hard level surfaces capable of supporting the load. Center load on saddle. Use as a matched pair to support one end of a vehicle only. Failure to heed these markings may result in personal injury and/or property damage.
- Stands are not to be used to simultaneously support both ends or one side of a vehicle. No alterations shall be made to this product.
- Inspect the Jack Stands before each use. Do not use if bent, broken or cracked components are noted.




Always firmly apply parking brake

 


Any jack used must only be operated as a lifting device.



 
Place wheel chocks at the front and rear of the tires that will not be lifted before proceeding.



 
These jack stands must only be used as supporting devices. Lifting must always be done with a proper capacity jack.



 Lifting devices are only designed for use on hard, level surfaces only. Use on uneven or unstable surfaces could result in instability and possible failure to support load.



 Weight must be supported by a set of jack stands rated at the proper capacity before any work or inspection can be done on vehicle. Do not exceed the rated capacity or loss of load may occur. Always place load at the center of the jack stand's saddle for most stable support.



Always center any jack used under the axle or a flat, reinforced frame surface.

Warranty

Maasdam Pow'R Lift™ (the "Manufacturer") proudly warrants these quality manufactured products only to be free from defects in workmanship and factory materials so long as the tool is used and maintained properly and in accordance with the Operations and Safety Manual and information which accompany and relate to the tool. Products made for Maasdam Pow'R Lift™ outside the USA are covered by other limited warranties as stated on the box for the particular product.

Manufacturer shall have the sole discretion to inspect and determine whether purchaser has used and maintained the tool properly for purposes of application of this warranty. The sole monetary limit and measure of damages of Manufacturer shall be the price of the defective unit, and Manufacturer shall have no liability or responsibility for consequential or any other kind of damage caused by the defective unit or any of its parts, including, but not limited to, loss of use, commercial loss or loss of business. This warranty is extended only to the first purchaser of this product and only if the product is used as intended by the Manufacturer. No alterations shall be made to this product. Modifications to this unit will void the warranty.

To use this warranty, you may bring the defective unit to the store from which you purchased it, or you may return the tool to our factory at **415 East State Parkway, Schaumburg, IL 60173**, postage prepaid. Before returning the product to our factory, call the office using our toll free telephone number, **888-797-7855**, to identify the defect(s) of which you complain. Your return address should appear on the shipping container when transmitting any tools.

THIS WARRANTY IS IN PLACE AND IN LIEU OF ALL WARRANTIES OF MERCHANTABILITY AND FITNESS. By acceptance of the product, the purchaser and user agree to the terms hereof and incorporate the same in any contract for the purchase of this product.

Pre-Operation

BEFORE ASSEMBLY AND OPERATION

Compare all parts with the Package Contents lists in this manual. If any part appears missing or damaged, do not use this product. Contact the Customer Service at 1-888-797-7855 or visit www.maasdam.com.

 
Operation Instructions

TO POSITION JACK STANDS:

1. Set parking brake and block the wheels not being raised
2. Raise vehicle to desired height and insure it is stable.
3. Extend post to height of axle or flat reinforced framed surface.
4. Check the Load Locking and Release Handle to insure that the tooth has been engaged on the post.
5. Make sure both jack stands are at an equal height and will support the load evenly when the lifting device is removed.
6. **IMPORTANT:** Place jack stands under support points specified by the manufacturer. **DO NOT** crawl under the vehicle when placing or removing stands.
7. **SLOWLY** lower the load onto the jack stands and check to insure the load is located on the center portion of the saddle. If load is not located on the center of the saddle or if load is unstable, relift the load and reposition the jack stands to ensure proper positioning before continuing with work or repairs.

TO REMOVE JACK STANDS:

1. Carefully raise vehicle enough to clear the stands, making sure the vehicle remains stable.
2. Remove stands, being sure not to crawl under the vehicle in the process.
3. Following instructions provided with your lifting device, carefully lower the vehicle to the ground.

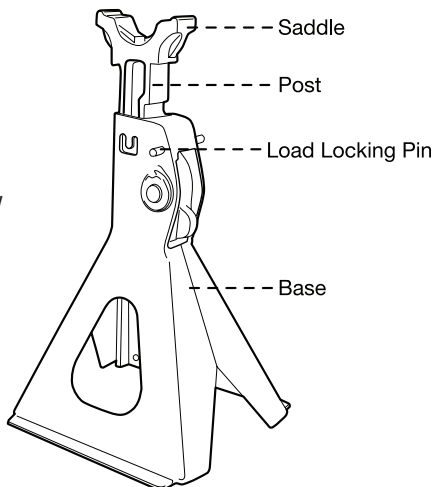

Owner And/OR Operator Responsibilities

The owner and/or operator shall study the product instructions and retain them for future reference.

The owner and/or operator shall have an understanding of the product, its operating characteristics, and safety operating instructions before operating the PALD. Safety information shall be emphasized and understood. If the operator is not fluent in English, the product and safety instructions shall be read to and discussed with the operator in the operator's native language by the purchaser/owner or his designee, making sure that the operator comprehends their contents.

The PALD shall be maintained in accordance with the product instruction

1. When stand is not in use, the ratchet should be in fully lower position.
2. Always keep jack stand clean and wipe with oil cloth every two months.
3. Keep moving parts clean; lubricate moving parts every 3 months.

Visual inspection shall be made before each use of the PALD by checking for abnormal conditions, such as cracked welds, leaks, and damaged, loose, or missing parts.

Other inspections shall be made per product operating instructions.

Each PALD shall be inspected immediately if the device is believed to have been subjected to an abnormal load or shock. It is recommended that this inspection be made by a manufacturer's or supplier's authorized repair facility.

Owners and/or operators should be aware that repair of this equipment may require specialized knowledge and facilities. It is recommended that an annual inspection of the PALD be made by a manufacturer's or supplier's authorized repair facility and that any defective parts, decals, or safety labels or signs be replaced with manufacturer's or supplier's specified parts. A list of authorized repair facilities is available from the manufacturer or supplier.

Any PALD that appears to be damaged in any way, is found to be worn or operates abnormally **SHALL BE REMOVED FROM SERVICE UNTIL REPAIRED**. It is recommended that necessary repairs be made by a manufacturer's or supplier's authorized repair facility if repairs are permitted by the manufacturer or supplier.

Because of potential hazards associated with this type of equipment, no alterations shall be made to the product.

Only attachments and/or adaptors supplied by the manufacturer shall be used.



1-888-797-7855

WWW.MAASDAM.COM

Retain this manual for future use.