


LBC3032 (L3032BC), VBC3032 (V3032BC) - INSTRUCTIONS


Organize your parts and hardware.

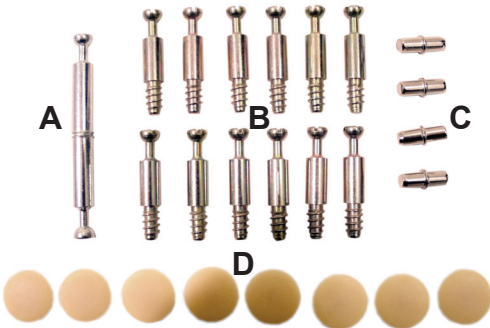

Hardware should include:

- A) 1 Double Cam Lock
- B) 12 Cam Locks
- C) 4 Shelf Supports
- D) 8 Caps

NOTE: 14 Cams (shown in Step 2) should already be placed in wooden parts.

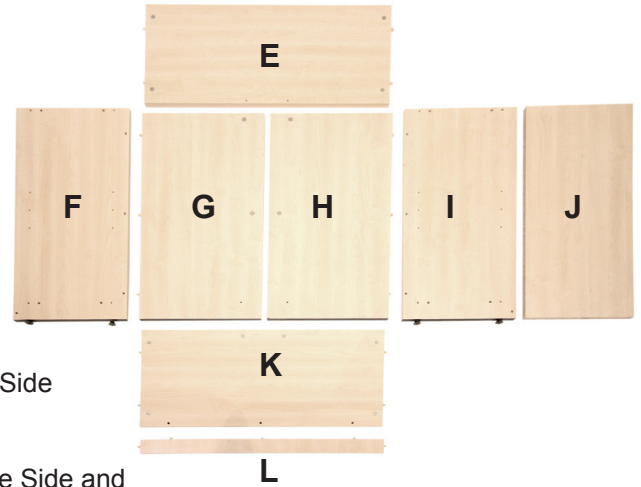

Wooden Components include:

- E) 1 Top Shelf F) 1 Left Side G) 1 Left Back H) 1 Right Back I) 1 Right Side
- J) 1 Adjustable Shelf K) 1 Bottom Shelf L) 1 Bottom Support

NOTE: When identifying components, remember that the bottom edge of the Side and Back Pieces is black.

Tools Required: Phillips Screwdriver

Step 1: Thread Cam Locks (B) into small holes in Bookcase Sides, Back pieces, and Top.

Step 2: Check Cams to make sure that the arrow is pointing toward the hole in the side as shown.

Step 3: Attach Back Pieces (G, H) together with the Double Cam Lock (A). Secure pieces together by turning cams clockwise as shown.

Step 4: Attach Bottom Support (L) to Bottom Shelf (K); Insert dowel rods on the support into holes on the bottom of the shelf.

Step 5: Attach Top and Bottom Shelves (E, K) to Back Pieces (G, H); turn cams clockwise to secure.

Step 6: Attach Sides (F, I) to Top, Bottom, And Back Pieces; turn cams clockwise to secure.

Step 7: Place Caps (D) over visible Cams.

Step 8: Using Shelf Supports (C), position adjustable shelf (J) as desired.



IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.