

SPEAKMAN®

SE-575

Installation, Operation & Maintenance Instructions

EYESAVER® EYE/FACE WASH

DESCRIPTION

Wall mounted emergency eye/face wash. Supplied with stay-open full flow ball valve; activated by stainless steel paddle handle; twin spray heads with individual flow restrictors, and flip-off dust covers.

SPECIFICATIONS

SPRAY HEADS: (2) Aerated Yellow Abs Plastic Spray Outlets and Dust Cover

VALVE: 1/2" NPT Female Brass, Chrome-Plated

ACTIVATOR: Stainless Steel Push Handle

INLET: 1/2" NPTM

SHIPPING WEIGHT: 4.43 LBS

EMERGENCY SIGN: 7-7/8" X 7-7/8" Plastic Wall Sign

INSTALLATION

NOTE: This unit should be connected to an uninterrupted source of potable water, with a minimum flowing pressure of 30 PSI and a maximum static pressure of 125 PSI.

Review rough-in drawing to assure proper installation. If unit is being mounted on a wall, drill a hole in wall 38-1/2" above floor for piping eye/face wash to a supply. Be sure to leave a minimum of 6-1/2" between center of valve and finished wall, for handle clearance when operating. Connect a water supply to the unit (use pipe sealant on all joints) that is a 1/2" minimum uninterrupted source of potable water. Failure to use potable water can result in emergency units producing impure or contaminated water causing possible further injury. Make sure unit is level so that an even spray pattern will be produced by eye/face wash.

OPERATION

The eye/face wash is activated by pushing the paddle handle forward 90 degrees. Once the unit is activated, water will discharge from the spray outlets until the trigger bar is manually pulled back to the "Off" position.

TESTING PROGRAM

The American National Standards Institute (ANSI) states that all safety emergency equipment shall be activated on a weekly basis to flush the line and verify proper operation. Speakman Company furnishes a testing record tag (91-0635) with each unit. On this tag the date of inspection and the inspector's initials should be noted.

MAINTENANCE


The valve and the eyewash are the only portions of the unit that may require maintenance. Should you need parts to repair this unit, please reference the parts listing below for correct part numbers. Before any maintenance is done be sure to shut the water supply off.

SPEAKMAN®

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107 Fax: 800-977-2747

02/21/18 www.speakman.com 92-1451-08

ROUGH-IN

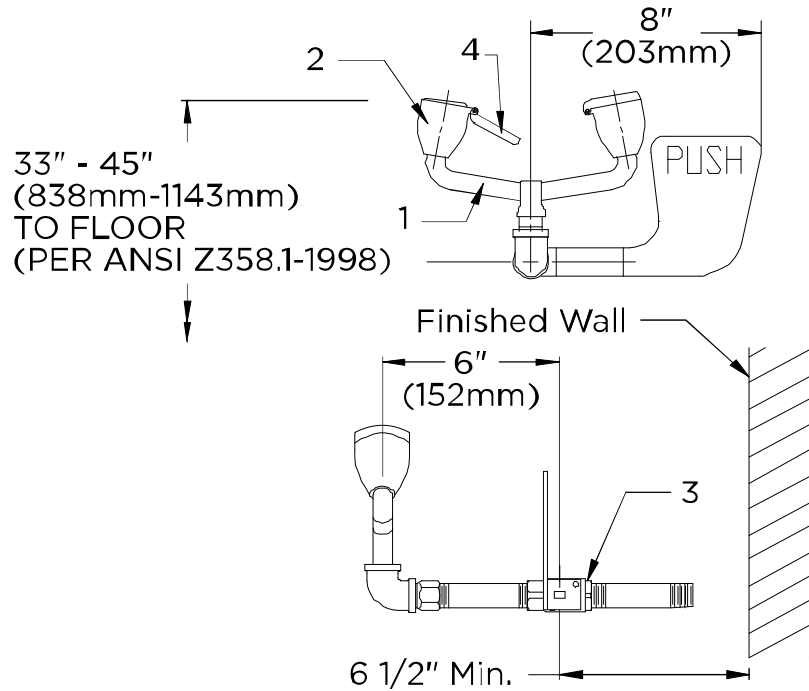

Note: All units meet existing ANSI Z358.1 Standards and OSHA Rules. Product improvements may cause specification and dimensional changes without notice.

FLOW DATA

EYEWASH:

FLOW PRESSURE PSI (BAR)	30 (2.07)
FLOW RATE GPM (LPM)	4.5 (17)

NOTE: This unit should be connected to an uninterrupted source of potable water, with a minimum flowing pressure of 30 PSI and a maximum static pressure of 125 PSI.

REPLACEMENT/REPAIR PARTS

ITEM	PART/GROUP #	DESCRIPTION
1	RPG05-0715	Bull Horn Assembly
2	RPG38-0390	Spray Head Assembly (4 each)
3	RPG20-1883	Ball Valve Assembly
4	RPG07-0104	Flip Top Dust Cap Replacement (20 each)

WARNING: Use only genuine Speakman parts when repairing or replacing components. To order parts call 1-800-537-2107.

SPEAKMAN®