DISAPPEAR

All-Purpose Spot & Stain Remover

Combines detergents, emulsifiers and penetrating agents, offering superior emulsifying power for oil and grease stains. Ready-to-use. For use on carpets, upholstery, and as a laundry pre-spotter.



PRODUCT INFORMATION:

- · Quickly releases oil and water-based stains
- · Formulated to prevent re-soiling in carpets and laundry
- · Fresh scent

| pH | 12.0 - 13.5 |
|-----------|---------------------------|
| Form | Liquid |
| Fragrance | Pleasant |
| Color | Clear |
| Packaged | 12/1 qt Case, 4/1 gl Case |
| | |

DIRECTIONS FOR USE:

CARPET & UPHOLSTERY: Spray undiluted product on stained or soiled area until wet. Allow product to remain in contact for 10 to 15 minutes. Do not scrub. Blot up with a damp, absorbent cloth. Shampoo carpet or upholstery as usual. If stain persists, repeat procedure.

LAUNDRY: Spray product on stain or soil. Allow product to remain in contact for 5 to 10 minutes. Rinse with water. Run through usual laundry cycle.

IMPORTANT SAFETY INFORMATION:



DANGER

Causes skin irritation. Causes serious eye damage.

Wear protective gloves, protective clothing, eye protection and face protection. Wash hands thoroughly after handling. Dispose of contents and container in accordance with local, regional, national and international regulations.

FIRST AID: IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. IF ON SKIN: Wash with plenty of water. If skin irritation occurs: Get medical attention.

Emergency Response Number ChemTel Inc. 1-800-255-3924

SOLUTIONS FOR A CLEANER WORLD™



