

Operating Instructions and Manual

HETR


SAVE THESE INSTRUCTIONS: Read this instruction manual carefully before installation and use. Keep this manual for future use in case it is needed.

Model H1019

Ceiling Mount Heater



WARNING: Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

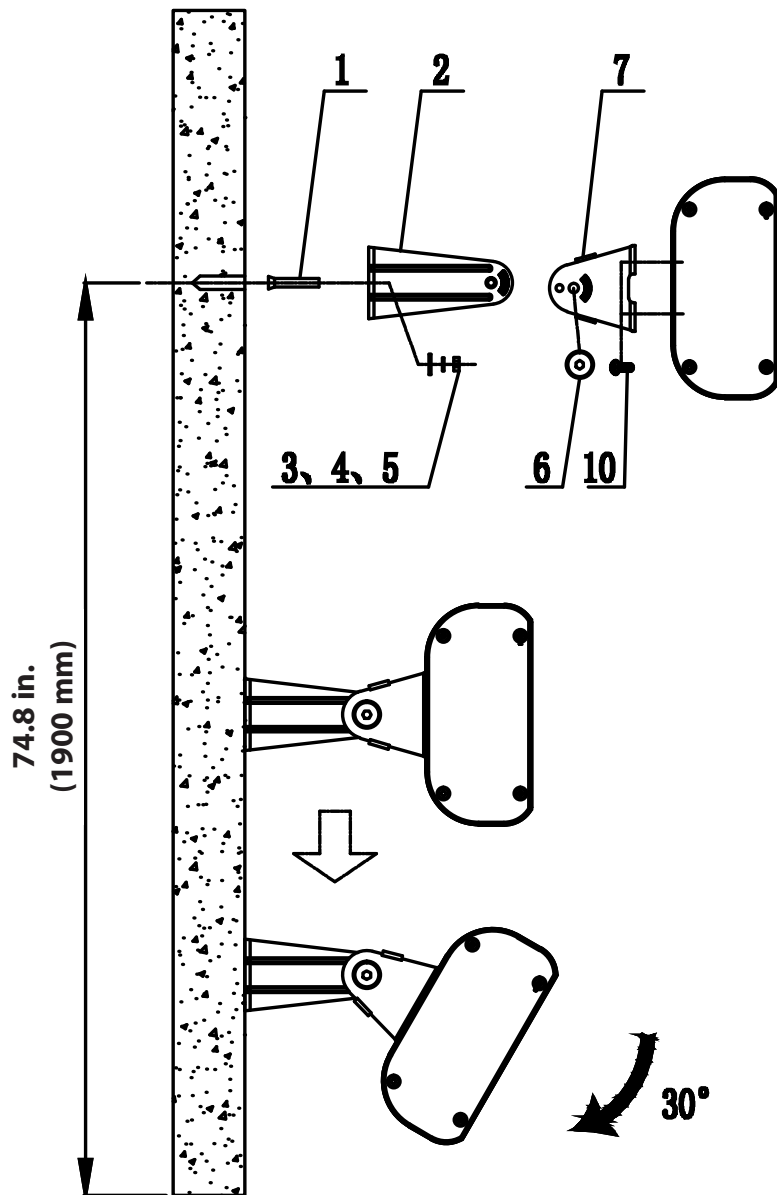

PARTS LIST

No.	Part Name
1	Expansion Bolt (M6*70)
2	Upper L Bracket
3	Washer
4	Spring Washer
5	Screw Nut (M6)
6	Screw (M6*16)
7	Lower L Bracket
8	Main Switch
9	Control Panel
10	Screw (M6*8)
11	Allen Key
12	Remote Control


ACCESSORIES PACK

Qty	Part Name
2	Upper L Bracket
2	Lower L Bracket
2	Expansion Bolt (M6*70)
2	Screw (M6*16)
1	Remote Control
1	Allen Key
4	Screw (M6*8)

PREPARATION

1. Prepare a cross head screw driver.
2. Read this instruction manual carefully before installation and use. Keep this instruction manual in a proper and safe place for future use in case needed.

Fig.A

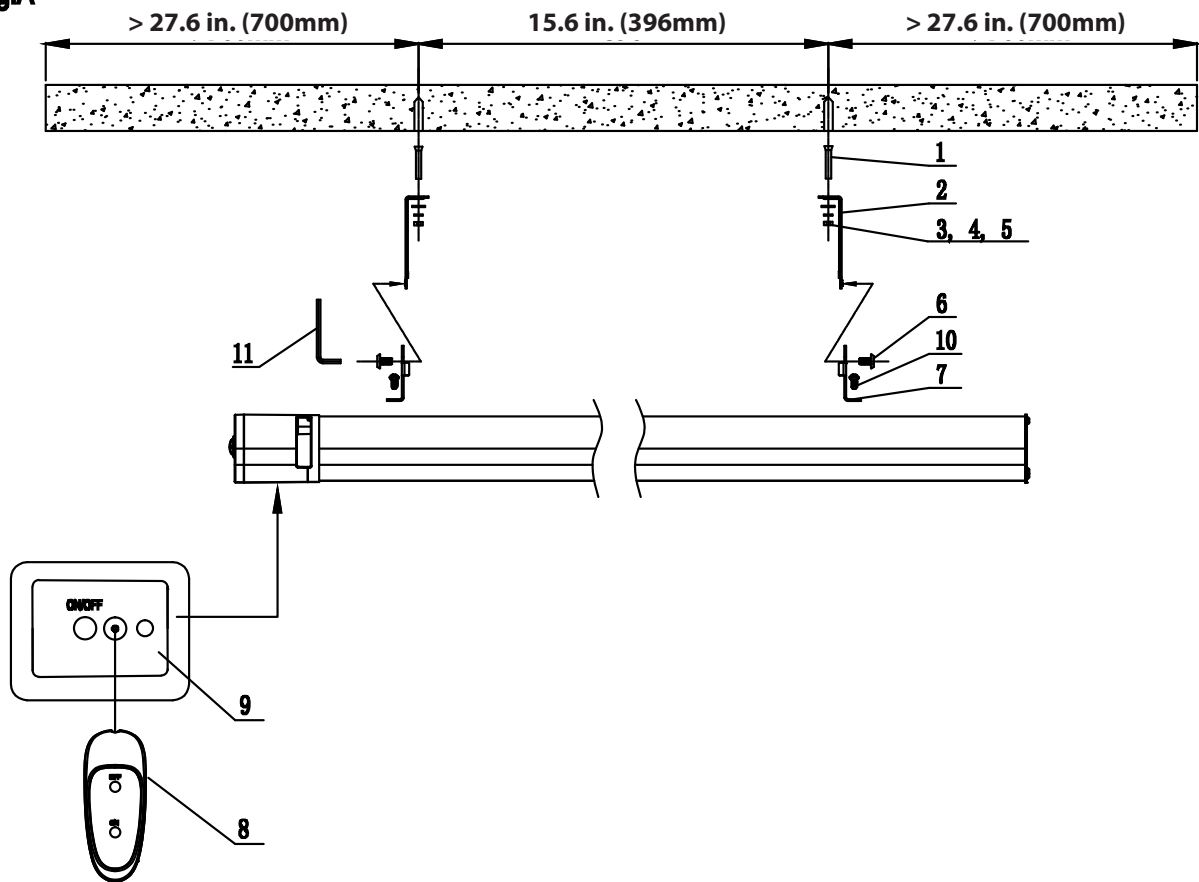

INSTALLATION

1. The heater must be installed on at least 5.9 ft. (1.8M) from the ground and 19.7 in. (50cm) from the side wall.
2. Drill 2 holes on the ceiling or wall according to the size as table showed above. Insert the 2 Expansion Bolts into the holes. Use a spanner to twist the Screw Nuts on the Expansion Bolts clockwise till they are securely located in the holes. Unscrew the Screw Nuts and put them aside with Washers, Spring Washers for further use later.
3. Put Upper L Bracket onto the ceiling or wall. Let the 2 Expansion Bolts go through the holes on Upper L Brackets and fix them with the Washers, Spring Washers and Screw Nut above mentioned.
4. Put Lower L Bracket onto the rear side of the heater. Fix them with screws M6*8 using the provided allen key.
5. Mount Upper L Bracket on Lower L Bracket. Screw it tightly with Screw M6*16. For wall-mounted installation, make sure the control box is on the left side.
6. Loose the Screw M6*16, set the heater to a desired angle and drive the Screws M6*16 tight. The adjustable angle is within 60 degree totally.

OPERATING INSTRUCTIONS


1. Plug in the unit to a socket. Make sure the power supply is same as rated.
2. Press Switch on left side of the heater. LED indicator light stars flashing showing the heater is on standby. Press ON button on control panel (or ON button on remote control) to switch on the heater. To shift the heater to standby mode, press ON button on control panel (or OFF button on remote control). LED indicator light start flashing again.
3. To switch off the heater, press Switch on left side of the heater accordingly.

MAINTENANCE AND CLEANING

1. Before cleaning, make sure the power has been turned off at the circuit breaker panel and that the heating element of the heater is cool.
2. To maintain the external appearance of the radiator, it need only be wiped over occasionally with a dry duster. During the summer months, or at other times when the appliance is not in use and is completely cold, it should be the best opportunity to wipe over with a damp cloth. Store the cord, total heater, and the like in the cool place when not in use.
3. Do not use abrasive cleaning powders or furniture polish. Do not use chemical or abrasive products, metallic scourers and so on , which may deteriorate the surface, to clean the appliance.
4. All other servicing should be performed by authorized service personnel
5. No disassembly when cleaning.

IMPORTANT INSTRUCTIONS


When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before installing or using this heater.
2. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended
3. Do not operate any heater after it malfunctions. Disconnect power at service panel and have heater inspected by a reputable electrician before reusing.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
5. To prevent a possible fire, do not block air intakes or exhaust in any manner.
6. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored
7. The unit must be placed with the clearance of 100cm (3.5 ft) to the wall and 30cm (1 ft) to the ceiling.
8. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. High temperature, keep combustible material such as furniture, pillows, bedding, papers, clothes, curtains at least 3 feet (0.9m) from the front of the heater and away from the side and rear.
9. The heater must be installed at least 2.1m (7 ft) above the floor.
10. The unit is at high temperature during operation. It keeps hot for a period after shut down. Potential danger would occur when touching it during this period.
11. Don't place the unit close to curtain and/or other flammable objects. Otherwise there will be a danger of catching fire.
12. Don't cover the unit with anything during operation or a short time after it's shut down.
13. Don't wrap the power supply cord on the unit.
14. The unit must be handled with care, and avoid of vibration or hitting.
15. The unit must be securely grounded during operation.
16. When damaged, the unit must be repaired by professional repairing team.
17. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
18. The heater must not be located immediately below a socket-outlet.
19. When assembling, keep clear from any board or flammable material.
20. Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. The head of the unit is at high temperature during operation. Unplug the unit and wait till it's cool before cleaning.
24. Don't use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
25. Don't use this unit in place where causticity or volatile air exists, i.e. dust, steam, gas, etc.
26. Don't use this unit as a cloth drier or towel drier.
27. Don't use this unit as a sauna heater.
28. Don't use this unit as a room heater of heat storing.
29. Don't use this unit in place of animal propagating and raising.
30. Don't use this unit in heating system of hot air centre.
31. Don't immerse this unit into water for cleaning.
32. The unit should be plugged in a socket, which is easily visible and reachable.
33. To avoid potential fire hazards, never place your heater or its electrical cord under rugs, or carpeting. Place the electrical cord away from busy areas to avoid accidental tripping and contact.
34. To disconnect heater, turn controls to off, and turn off power to heater circuit at main disconnect panel. then remove plug from outlet.
35. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
36. Surface temperatures become very hot when operating heater. Children and adults should stay away to avoid burns or clothing ignition.
37. Young children should be carefully supervised when they are in the area of the heater.
38.  **CAUTION** : MOUNT WITH BOTTOM OF HEATER AT LEAST 2.4M (8FT) ABOVE FLOOR OR GRADE.

SAVE THESE INSTRUCTIONS.

GROUNDING INSTRUCTIONS

This heater is for use on 120 volts. The cord has a plug as shown at A in Figure below. An adapter as shown at C is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

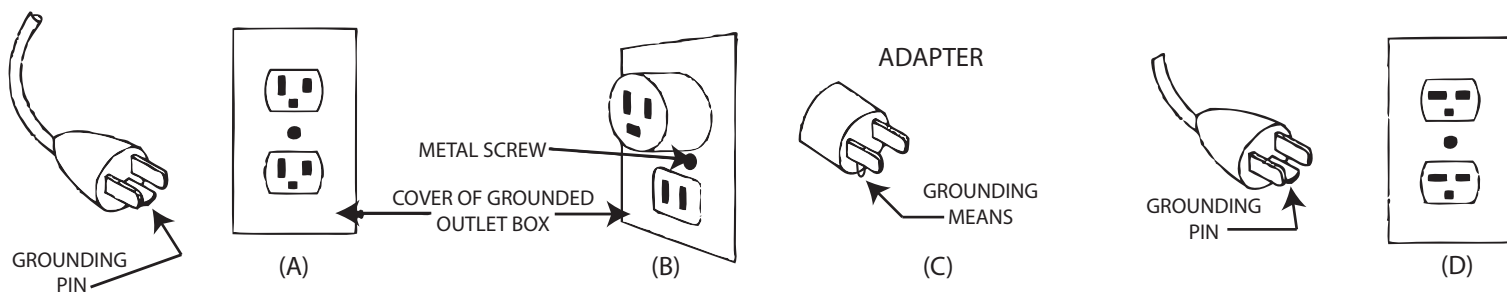

VENTAMATIC, LTD. LIMITED WARRANTY

This warranty is underwritten by Falco Insurance Company and is extended to the original retail purchaser of this model or, if this unit is purchased and requires installation by a building contractor, to the original owner of the home. No subsequent purchaser of the unit or of a home in which it is installed is entitled to any of the benefits of this warranty.

This product is warranted against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. No other parts or components are warranted. There is no warranty for defects caused by abuse, faulty installation or the like.

Repairs or replacement parts supplied under this warranty are warranted only for the period of this warranty; that is, one (1) year from the date of the original retail purchase of the unit. In the event of a defect or malfunction, we will replace or repair the defective part or component only and return the new or repaired part to you freight prepaid.

You must bear all other expenses incurred in obtaining repairs, including labor required for field repair or replacement and the cost of shipping the defective part to us. You must also bear the cost of repair to or replacement of any part or component and the shipping charges incurred for the repair or replacement and return to you of any part or component not covered by this warranty, including parts or components damaged by you.

The company reserves the right to demand and receive written evidence of the date of purchase before undertaking its obligations under this warranty. The right to demand and receive written evidence of date of purchase extends to all licensed dealers of Ventamatic, Ltd. products.

You should, therefore, retain your sales slip and attach a copy of it to the warranty claim.

To start a warranty claim you must:

Contact Ventamatic, Ltd.

An RGA (Returned Goods Authorization) form is required for returns to the factory to ensure your return can be processed efficiently and quickly. Please contact Ventamatic, Ltd. toll-free at 800-433-1626 or via web at www.MYMAXXAIR.com to obtain an RGA and follow the instructions given.

There is no informal dispute settling mechanism available in the event of a controversy involving this warranty. Any and all implied warranties which may exist terminate upon the expiration of this warranty one (1) year from the date of the original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

Ventamatic, Ltd. is not liable to you for incidental or consequential damages arising out of defect or malfunction of a unit or its installation or out of any alleged breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.