

# PORTABLE VENTILATOR - HVHF08 / HVHF12

## OPERATORS MANUAL



### READ AND SAVE THESE INSTRUCTIONS

**CAUTION:** Read and follow all instructions before operating blower. Do not use fan if any part is damaged or missing.

**WARNING:** This blower has a 3-prong grounded plug and must be inserted into a grounded outlet for safe operation and to reduce the risk of electrical shock. This product can be used indoor or outdoor with a proper GFI outlet.

### Rules for Safe Operation

- Never insert fingers or any other object through the grill guard while the blower is in operation.
- Unplug the blower when moving from one location to another.
- Unplug the blower when removing grill guards for cleaning.
- Be sure the blower is placed on a stable, flat surface when operating.
- Do not use blower in a window. For ventilating out a window, use portable ducting.
- Do not alter the blower in any way.
- Ensure grill guards are in place before operating blower.
- Do not block the inlet or the outlet of the blower.
- In case of abnormal noise or smell, TURN OFF the blower immediately.
- Ensure the blower is properly grounded.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Keep children away from blower.

### CAUTION:

- Do not alter the blower's assembly.
- Be sure FRONT and REAR GUARD screws are completely screwed down in locking position before operation.
- If the supply cord is damaged, it must be replaced by a service agent or a similarly qualified person in order to avoid hazard and not void warranty.

### CLEANING & MAINTENANCE

**WARNING:** Unplug from electrical supply source before cleaning. After servicing, any safety device (including grills and blades) must be reinstalled or remounted as previously installed. Use soft damp cloth then wipe with a dry cloth. Do not use harmful cleaners. Do not bend the blade. The guard must be kept clean to allow for proper air flow and motor cooling. The blower should be serviced every 200 operating hours and a maintenance log must be maintained to qualify for warranty period.

### WARRANTY

This warranty is underwritten by Falco Insurance Company and is extended to the original retail purchaser of this model or, if this unit is purchased and requires installation by a building contractor, to the original owner of the home. No subsequent purchaser of the unit or of a home in which it is installed is entitled to any of the benefits of this warranty.

This product is warranted against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. No other parts or components are warranted. There is no warranty for defects caused by abuse, faulty installation, or the like.

Repairs or replacement parts supplied under this warranty are warranted only for the period of this warranty; that is, one (1) year from the date of the original retail purchase of the unit. In the event of a defect or malfunction, we will replace or repair the defective part or component only and return the new or repaired part to you freight prepaid.

You must bear all other expenses incurred in obtaining repairs, including labor required for field repair or replacement, and the cost of shipping the defective part to us. You must also bear the cost of repair to or replacement of any part or component and the shipping charges incurred for the repair or replacement and return to you of any part or component not covered by this warranty, including parts or components damaged by you.

The company reserves the right to demand and receive written evidence of the date of purchase before undertaking its obligations under this warranty. The right to demand and receive written evidence of date of purchase extends to all licensed dealers of Ventamatic, Ltd. products. You should, therefore, retain your sales slip and attach a copy of it to the warranty claim.

**To start a warranty claim you must: Contact Ventamatic, Ltd.**

An RGA (Returned Goods Authorization) form is required for returns to the factory to ensure your return can be processed efficiently and quickly. Please contact Ventamatic, Ltd. toll-free at 800-433-1626 or via web at [www.MYMAXXAIR.com](http://www.MYMAXXAIR.com) to obtain an RGA and follow the instructions given.

There is no informal dispute settling mechanism available in the event of a controversy involving this warranty.

Any and all implied warranties which may exist terminate upon the expiration of this warranty one (1) year from the date of the original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

Ventamatic, Ltd. is not liable to you for incidental or consequential damages arising out of defect or malfunction of a unit or its installation or out of any alleged breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.