CARE AND CLEANING OF YOUR CUTTING BOARD

PREPARATION FOR USE AND MAINTENANCE

Your cutting board has been pre-seasoned with food-safe vegetable oil. We recommend that you oil it again with food-safe vegetable or olive oil daily for the first week using a clean cloth. After that, is recommended that you apply food-safe vegetable or olive oil once a month.

CLEANING INSTRUCTIONS

Wash with warm soapy water or mild detergent after each use and towel dry.

CAUTION: Do not put in the dishwasher.

LIMITED LIFETIME REPLACEMENT WARRANTY

Commercial Chef brand is used under license. Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co. at 1 (855) 855-0294 from the USA or Puerto Rico. W Appliance Co. warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the life of your product. The warranty commences the day the product is purchased. W Appliance Co. agrees that it will, at its option, replace the defective product with either the same unit or product equivalent to your original purchase.

EXCLUSIONS: THIS WARRANTY DOES NOT APPLY TO THE BELOW:

- Minor imperfections, surface markings as the result of shipping and slight color variations are normal and do not constitute a defective product.
- 2. Damage from ordinary wear and tear such as scratches, dents, stains or discoloration to all surfaces or other damage that does not impair the function of the product.
- If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
- 4. If damage is due to general misuse, accidents or acts of God.
- 5. If damage or breakage is due to dropping or impact.
- 6. Washing your products in the dishwasher, improper cleaning, or neglect
- 7. Using scouring pads, steel wool, abrasive cleaners and/or bleach on any surface of your product.
- 8. On units that have been transferred from the original owner.
- 9. On products that have been purchased as refurbished, like new, second-hand, in a "Final Sale" or "As-Is" terms.
- 10. To products used in a commercial or rental setting.
- 11. To products used in settings other than ordinary household use or used other than in accordance with the provided use and care instructions.
- 12. Transportation and shipping costs.
- 13. Product when used outside the United States or Puerto Rico.

PLEASE RETAIN PURCHASE RECEIPT TO CONFIRM PURCHASE AND OWNERSHIP REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Obtaining Service: To obtain service, product literature, supplies or accessories please call 1 (855) 855-0294 to create a ticket for exchange/repair. Please make sure to provide the date of purchase. model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions. W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at 1-855-855-0294

W Appliance Co., 1356 Broadway New York, NY 10018