

1

Flip the tub upside down onto a soft surface.




2

Place the pedestal on the tub and lay the brackets down with the bolts through the centered holes.



3

Place the white rubber spacers inbetween the brackets and the tub, while also over the lip of the pedestal.

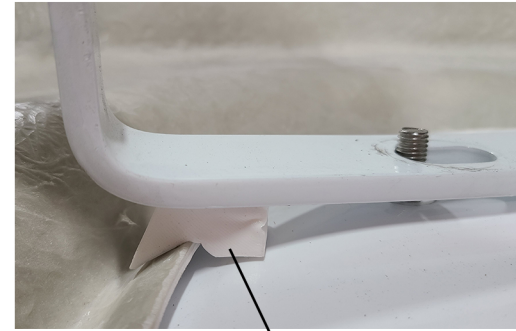

Rubber Spacer

Acrylic Pedestal Installation Guide

Parts included :

- 4 17mm Nuts
- 4 Metal Washers
- 4 White Rubber Spacers
- 2 Metal Brackets

Needed :

- Soft Surface or Blanket
- Impact Drill
- 17mm Socket
- 2 People for installation is advised.

4

Once confident the pedestal is laying level on the tub, hand tighten the nuts and washers onto the bolts under the tub while they are through the centered holes in the metal brackets.



5

Check to make sure the spacers have not moved and are completely under the bracket. Fully secure the nuts to the bracket and tub with an impact drill and 17mm socket.



6

You can use a large level and make any adjustments to the pedestal.

After fully securing and leveling, flip the tub and enjoy!

