


REGENCY

YOUR COMPLETE OFFICE SOLUTION

Stand Up Desk LSUD4136 • INSTRUCTIONS

Hardware : You will need 2 person(s) for this assembly. You will need a Phillips head screw driver.


A: Cam Pin(10) • **B:** Cam Cap(10) • **C:** Wood Screw(4)

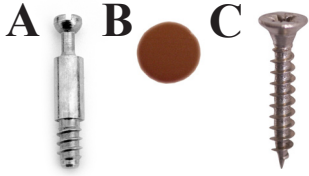

Parts: D: Top Support(2) • E: Sides(2) • F: Back



Figure 1: To open Cam, point arrow toward Cam Pin hole. To lock Cam, turn clockwise.

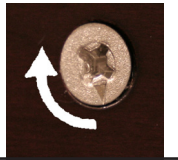

STEP 1 : Screw in 5 Cam Pins(A) into each Side(E).



STEP 2 : Attach Top Supports(D) and Back(F) to the Left Side(E). (See Figure 1)



STEP 3 : Attach Right Side(F) by tightening Cam Locks. (See Figure 1)



STEP 13 : Place all Cam Caps(B) in place. You are now ready to connect the single/multiple unit top. (To connect top see top instructions also enclosed.)

IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

Any problems or questions call Regency Office Furniture at 1-866-816-9822