

**installation instructions:**

# URETHANE SCONCES

## SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

## TOOL & MATERIAL CHECKLIST

- Construction adhesive
- Caulk
- Caulking gun
- Fasteners
- Extra fine sandpaper
- Paint


## IMPORTANT INFO

- It is highly recommended that you paint/finish our sconce with 100% acrylic latex paint before you install them. Once installed, you can apply any necessary touch-up paint/finish.
- Clean installation surface, as well as the back of sconce of all dirt and dust with a clean cloth or sponge.
- Make sure that the surface and the back of the sconce are completely dry before attempting installation.
- Measure and mark the location where the sconce is going to be installed.

## INSTALL INSTRUCTIONS:

1. Lay the sconce face down on a soft surface that will not scratch/dent the sconce.
2. Apply a 1/2" bead of adhesive caulk all the way around the back edge of the sconce.
3. When pressing the sconce up against the surface, some adhesive may seep out.
4. Smooth away excess adhesive around the sconce with a finger or the putty knife.
5. Secure sconce with fasteners on the top corners and the bottom.
6. Fill in fasteners holes with caulking and wipe smooth with damp cloth.
7. Apply caulking around the sconce and wipe smooth with your finger, putty knife, sponge, or damp rag.
8. Sand smooth caulking if needed.

## EXAMPLE DIAGRAM:

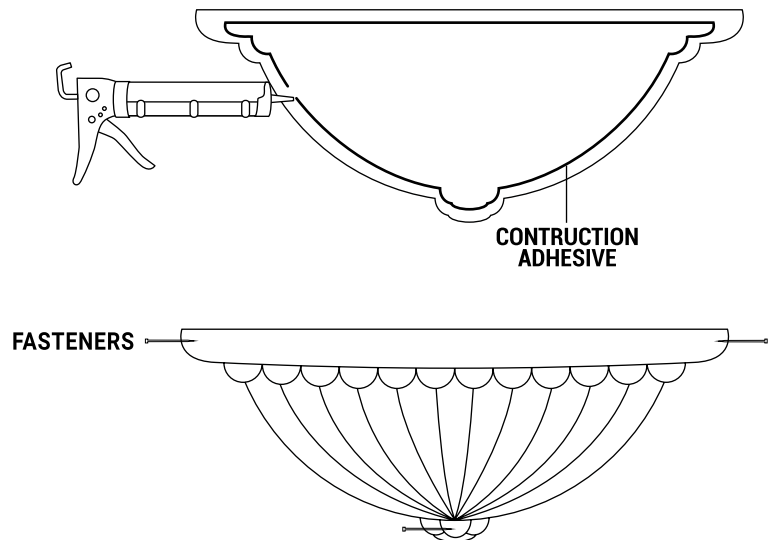

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

We Can Help. Call (866) 607-0453

[www.ekenamillwork.com](http://www.ekenamillwork.com)