

installation instructions:

PVC SLAT WALL

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- Standard power grab
- Adhesive
- Small brad nails
- Brad nailer or hammer
- 100% acrylic paint
- Paint brush or roller
- Fine sandpaper
- Chalk line & measuring tape
- Circular or Table Saw


IMPORTANT INFO

- Clean and prep the installation surface and each Slat of any debris with a clean cloth.
- It is highly recommended that you paint or finish the panels before installation.
- Recommended use of 100% acrylic latex paint for PVC products.
- Make sure the surface and the back of the panel are completely dry before installation.
- Before installing, acclimate the PVC panels in the room where you will be installing them.
- In most applications you will have to trim some Slats. Cut them with a standard power tool, such as a table saw. Sand cut edge ends and clean away any debris.
- Depending on your installation method, use standard power grip adhesive and brad nails.

INSTALL INSTRUCTIONS:

1. Prep and paint Slats before installing. Touch up paint as needed after installation.
2. Smooth installation surface with sandpaper by removing excessive bumps or texture. Wipe wall clean to clear debris.
3. We recommend laying out the desired layout before installation as these are completely customizable and space is up to you. Mark the installation points using a chalk line or straight edge and level.
4. Apply a small amount of adhesive to the back of the Slat and secure with small brad nails. (Follow adhesive manufacturer's instructions for proper application.)
5. Once the first one is installed, repeat step 4 on the rest of the Slats

EXAMPLE DIAGRAM:

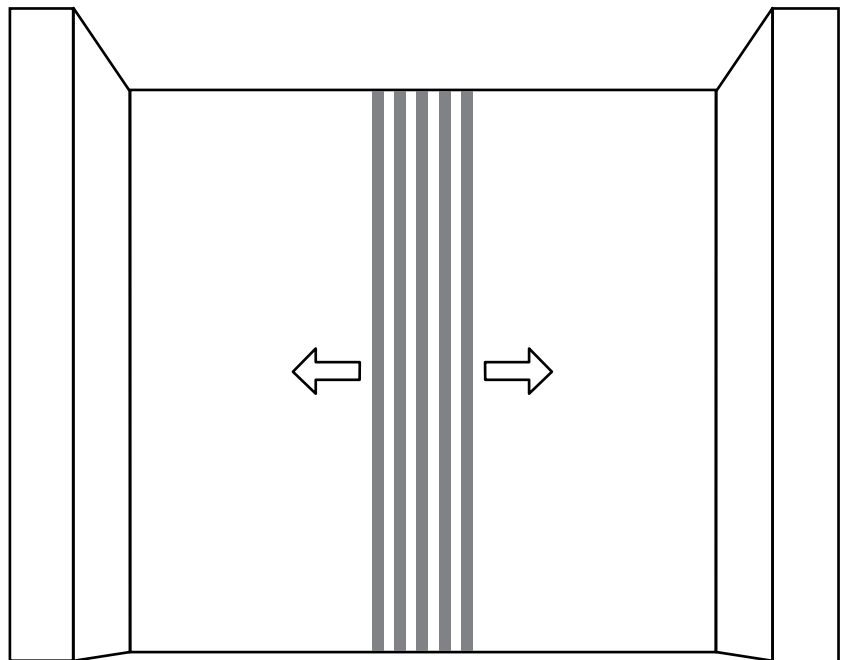

**FINISHING
NAILS**



Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

We Can Help. Call (866) 607-0453

www.ekenamillwork.com