

installation instructions:

WOOD WALL PLANKS

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow adhesive, power tools, paint manufacturers' instructions, and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- Tape measure
- Level
- Pencil
- Finish nail gun and nail set
- Power or table saw with short fine-toothed blade
- Adhesive and caulking gun
- Finish nails (2D-3D)


SPECIAL INSTRUCTIONS AND NOTES

- The installation surface must be clean, dry, flat and structurally sound.
- Sand high spots on the wall if needed.
- Clean the plank of any debris with a clean dry cloth.
- Before installing, it is recommended you acclimate the wood planks in the room where you will be installing them for 24-48 hours.
- In most applications you may have to trim the planks. After cutting, sand cut edge and remove any debris before installing.
- Depending on your installation method, use standard power grip adhesive and supplemental nailing to hold the planks in place until the adhesive sets.

STEP BY STEP INSTRUCTIONS

1. Select installation orientation: horizontal or vertical.
2. Using a level, draw a line for installing the starter board. Install or cut second plank to get desired shift.
3. Choose between adhesive or fastening installation.
 - Adhesive: lightly apply a construction adhesive and press the plank to the wall.
 - Fastening: use thin finish nails (hidden head nails) to fasten planks through the wood. Keep at least 3/4" distance from the edges of planks to apply nails.
4. Stack and combine them for desired pattern. Some installation options include leaving a gap between boards or tongue and groove tightly together for a seamless appearance.

EXAMPLE INSTALLATION DIAGRAMS

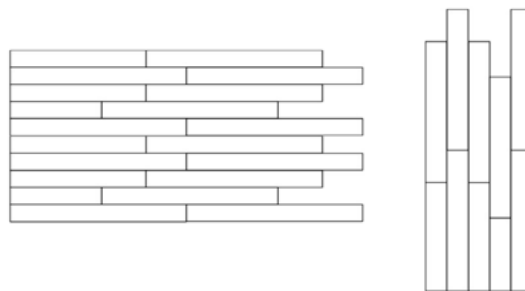

www.ekenamillwork.com

We Can Help. Call (866) 607-0453



EKENA
MILLWORK

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork