

REGENCY

YOUR COMPLETE OFFICE SOLUTION

LEGACY STORAGE CABINET • LSC2935 • INSTRUCTIONS

Organize your parts and hardware. You will need a Phillips head and flat head screw driver and rubber mallet.


Hardware :

A: Mounting Bracket(4) • **B:** Hinge(4) • **C:** Lock Lip • **D:** Door Tooth(2) **E:** Small Screw(4) **F:** Cam Locks(8)
G: Cam Pins(8) • **H:** Medium Screws(32) • **I:** Shelf Pins(4) • **J:** Adjustable Glides(4) **K:** Large Screws(4) •
L: Door Handles(2) • **M:** Keys(2)



Parts :


N: Back • **O:** Front Lip • **P:** Bottom • **Q:** Sides(2) **R:** Shelf • **S:** Top • **T:** Door(2)

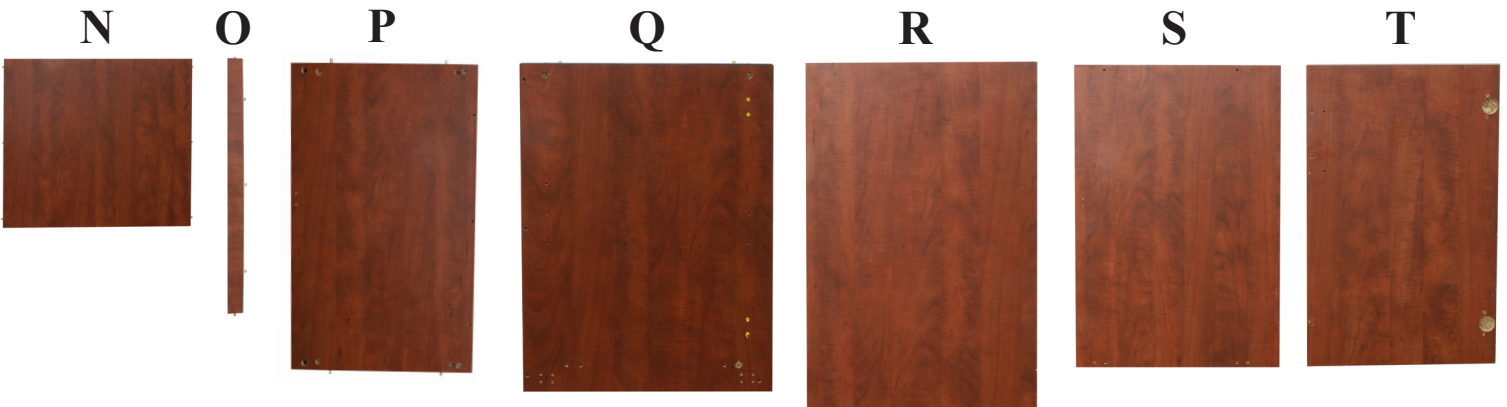

STEP 1 : Insert 4 cam pins(G) into top(S).



STEP 2 : Attach brackets(A) to sides(Q) using pre drilled holes with 2 medium screws(H) each bracket(4). Also insert 2 cam pins(G) and 2 cam locks(F) in sides(Q).

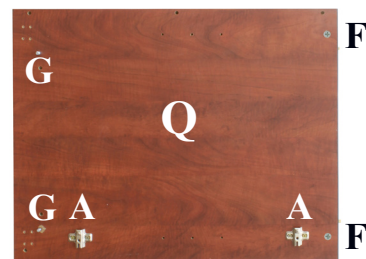

IMPORTANT NOTICE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

REGENCY

YOUR COMPLETE OFFICE SOLUTION

LEGACY STORAGE CABINET • LSC2935 • INSTRUCTIONS

STEP 3 : Place 4 cam locks(F) into bottom(P) and attach front lip(O) to bottom by inserting dowel rods on front lip(O) into bottom(P).

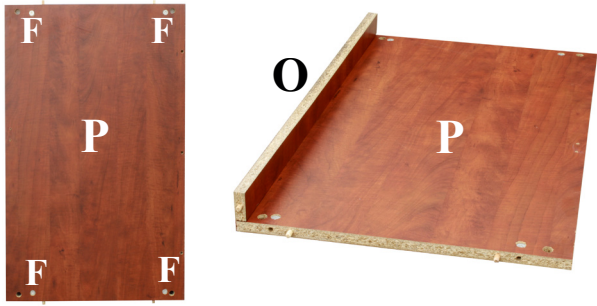


STEP 4A : Place side(Q) down, pins up and connect bottom(P) as shown below by inserting cam pins into locks and tightening.
STEP 4A : Place Back(N) into place by inserting Dowel rods into holes on Side(Q).



STEP 5 : Place second side(Q) in place by inserting cam pins into locks and tightening.



STEP 6 : Screw adjustable glides(J) into place with 4 medium screws(H) each glide(4).

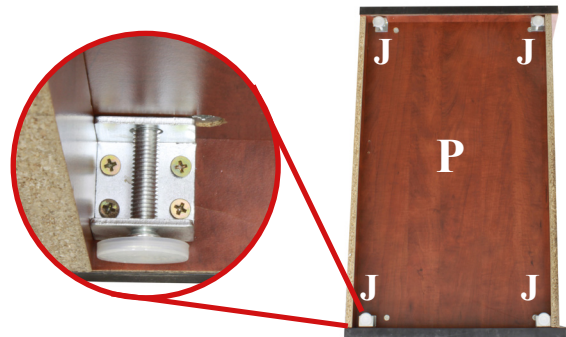

STEP 7 : Place shelf pins(I) in place and insert shelf(R).



STEP 8 : Place top(S) onto shell by inserting cam pins into locks and tightening.




IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.


Any problems or questions call Regency Office Furniture at 1-866-816-9822

LEGACY STORAGE CABINET • LSC2935 • INSTRUCTIONS


STEP 9 : Place door handles(L) onto doors(T) with 2 long screws(K) each. Also use 2 small screws(E) to attach 2 door teeth(D) to the door that is with out the locking mechanism.

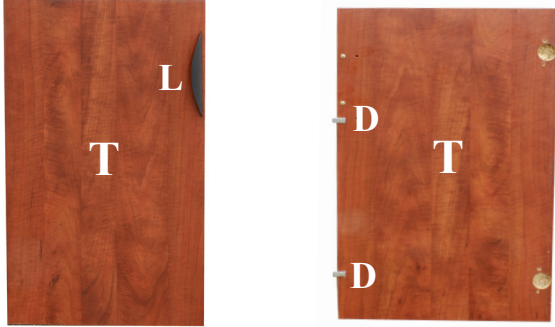

STEP 10 : Place Locking Lip(D) onto the underside of the top(S) with 2 small screws(E).

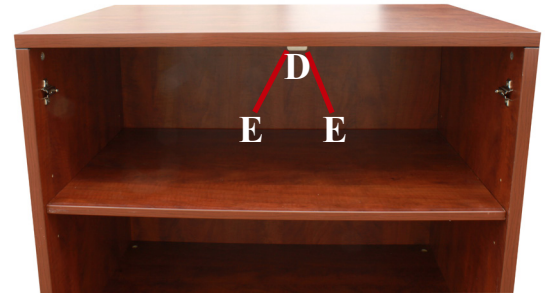


STEP 11 : Place Hinges(B) onto doors(T) with 2 medium screws(H) each.

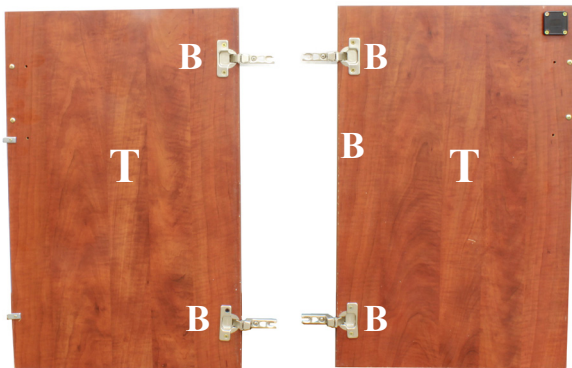

STEP 10 : Connect Doors(T) to mounting brackets(A) on the side walls(Q).

STEP 10A : Screw(10A) from bracket(A) interlocks with hinge(B) opening just as screw(10B) on hinge(B) interlocks with mount(A) opening.

Note..The screw 10B is an adjustment for the door position. Turn right to adjust door to center and left to adjust toward the side.

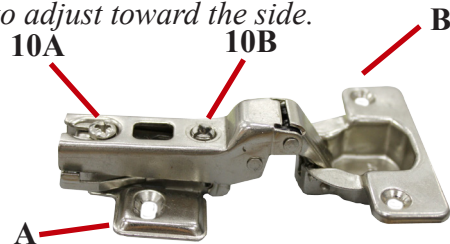

IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.