

## Extension Spring Installation Instructions


1. Unplug the power door opener and disconnect it from the door.
2. Raise garage door completely.
3. Fasten "C" Clamps on both the left and right door tracks against the bottom side of two rollers to keep the door open.
4. Completely remove old safety cable (the cable threaded through the extension spring).
5. With tension completely off of extension cable, remove cable from either the track support or the attaching plate.
6. Thread cable through pulley and remove pulley from spring.
7. Remove extension spring.
8. Attach pulley to new extension spring. Reinstall the new spring at the same attachment point as the old spring.
9. Rethread cable through the pulley and attach to track at the same attachment point as before.

## Safety Cable Installation Instructions

**Note:** Replace springs and cables one side at a time. If needed, look at the other side for reference.

1. Attach the loop end of the cable to the hook or eye-bolt. Thread the other end of the cable through the extension spring.
2. At the non-loop end of the cable, thread through framework, keeping slack to a minimum. Fasten wire clamp to secure the cable.

**Tools Required:**  
Wrench  
C-Clamps

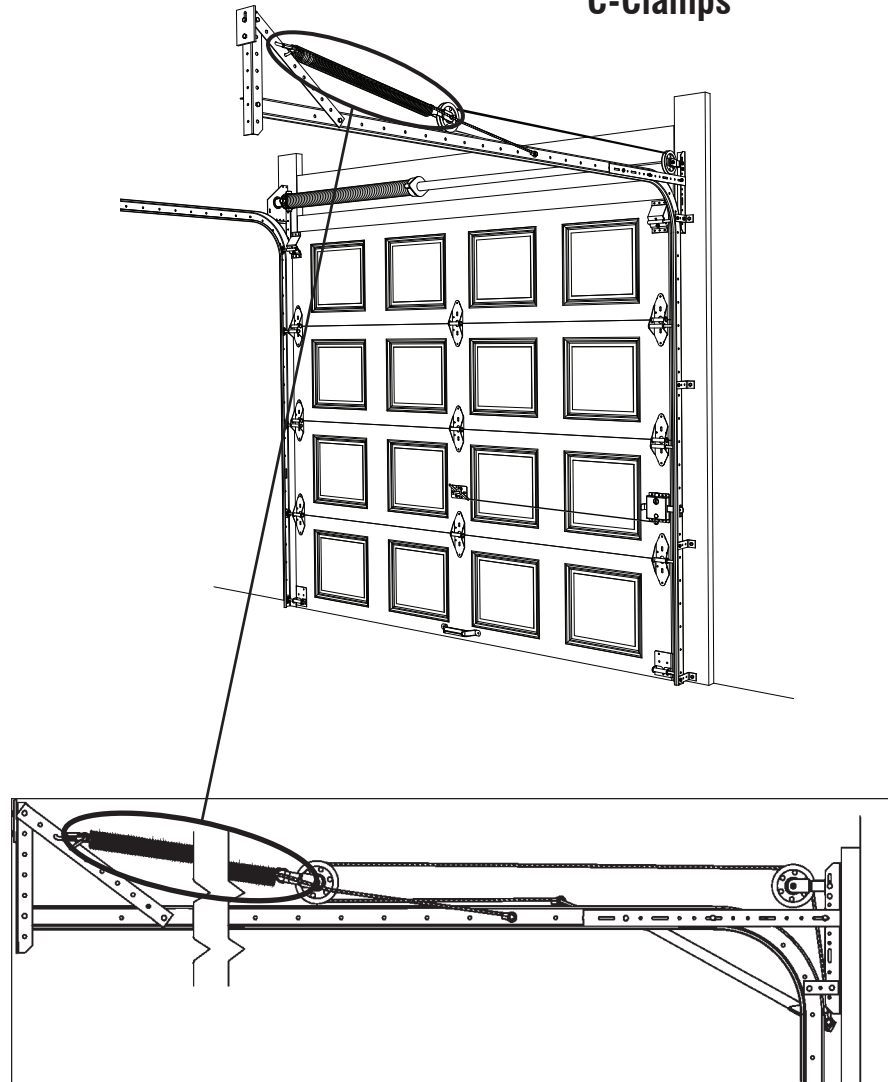

## Warning: Improper installation or door position can result in serious injury or death.

- Be sure to read and fully understand all instructions before starting any work.
- Wear eye protection.
- Disconnect power door opener from door before any other step.
- Do not remove more than one part at a time.
- Do not raise or lower without all components installed and tightly secured.
- This hardware is only intended for residential garage doors.
- All hardware, especially extension and torsion springs, is under extreme tension at all times.
- All tension must be released from springs before performing any work.
- If you are unsure if the replacement part matches the part to be replaced or if you do not understand the installation instructions, contact a professional installer.