

Electronic Timing Relays Class 9050 Type JCK

Retain for future use.

Introduction

This bulletin contains installation and operation instructions for the following Class 9050 electronic timing relays:

- Type JCK11–59
- Type JCK60
- Type JCK70

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Turn off all power supplying this equipment before working on it.

Failure to follow these instructions will result in death or serious injury.

Timing Functions

The 9050JCK¹ is an electronic time delay relay. A microprocessor clocks the elapsed time, executes the timing functions, and controls the output relay. Table 1 describes the ten timing functions.

NOTE: All functions may not be available for all JCK timers.

Table 1: 9050JCK¹ Electronic Timing Functions

| Function | Applies To | | Description | Timing Diagram |
|----------|------------------------------|-------------------------|---|----------------|
| On Delay | Adjustable Time Delay | Fixed Time Delay | When the input voltage is applied, the time delay begins. Relay contacts change state after time delay is complete. When the input voltage is removed, contacts return to their shelf state. The trigger switch is not used in this function. | |
| | JCK1–19 | JCK1F [*] | | |
| | Single Function Timer | | | |
| | JCK60 | | | |
| | Multifunction Timer | | | |
| JCK70 | | | | |
| Interval | Adjustable Time Delay | Fixed Time Delay | When the input voltage is applied, the relay contacts change state immediately and the timing cycle begins. When the time delay is complete, or when the input voltage is removed, contacts return to shelf state. The trigger switch is not used in this function. | |
| | JCK31–39 | JCK3F [*] | | |
| | Multifunction Timer | | | |
| | JCK70 | | | |

¹ The "*" indicates that the part number applies to all timing relays specified in this instruction bulletin.

Table 1: 9050JCK• Electronic Timing Functions (continued)

| Function | Applies To | | Description | Timing Diagram |
|------------------------------------|-----------------------|------------------|---|----------------|
| Off Delay Switch and Power Trigger | Switch Trigger | | Input voltage must be applied continuously. When the trigger switch closes, the relay contacts change state. When the trigger switch opens, the time delay begins. When the delay is complete, the contacts return to their shelf state. If the trigger switch closes before the time delay is complete, then timing is reset. When the trigger switch opens, the delay begins again, and the relay contacts remain in their energized state. If the input voltage is removed, the relay contacts return to their shelf state. | |
| | Adjustable Time Delay | Fixed Time Delay | | |
| | JCK21-29 | JCK2F• | | |
| | Power Trigger | | | |
| | Adjustable Time Delay | Fixed Time Delay | | |
| | JCK21PT-29PT | JCK2F•PT | | |
| Multifunction Timers | | JCK70 | | |
| One Shot Switch and Power Trigger | Switch Trigger | | Input voltage must be applied continuously. When the trigger switch closes, the relay contacts change state and the pre-set delay begins. During time-out, the trigger signal is ignored. If the input voltage is removed, the relay contacts return to their shelf state. | |
| | Adjustable Time Delay | Fixed Time Delay | | |
| | JCK41-49 | JCK4F•PT | | |
| | Power Trigger | | | |
| | Adjustable Time Delay | Fixed Time Delay | | |
| | JCK41PT-49PT | JCK4F•PT | | |
| Multifunction Timer | | JCK70 | | |
| Repeat Cycle-Off | Adjustable Time Delay | Fixed Time Delay | When input voltage is applied, the time delay T1 begins. When time delay T1 is complete, the relay contacts change state for time delay T2. This cycle repeats until the input voltage is removed. The trigger switch is not used in this function. NOTE: Two dials are provided for independently adjustable repeat cycle timing ranges. For JCK70 timing relay, T1 equals T2. | |
| | JCK51-59 | JCK5F• | | |
| | Multifunction Timer | | | |
| Repeat Cycle-On | Multifunction Timer | | When input voltage is applied, the relay contacts change state immediately and time delay T1 begins. When time delay T1 is complete, the contacts return to their shelf state for time delay T1. This cycle repeats until the input voltage is removed. The trigger switch is not used in this function. | |
| | JCK70 | | | |
| On/Off Delay | Multifunction Timer | | Upon application of input voltage, the time delay relay is ready to accept trigger signals. When the trigger switch closes, a pre-set On delay begins. At the end of the On delay, the relay contacts change state. When the trigger switch opens, the relay contacts remain in the current state until the pre-set Off delay elapses. At the end of the Off delay, the relay contacts return to their shelf state. The cycle can be repeated by re-closing the trigger switch after the timing cycle ends. If the trigger switch opens before the On delay elapses, the relay remains in its shelf state, and the delay timer resets. If the trigger switch re-closes before the Off delay elapses, the relay remains in its changed state, and the delay timer resets. | |
| | JCK70 | | | |

Table 1: 9050JCK• Electronic Timing Functions (continued)

| Function | Applies To | Description | Timing Diagram |
|-----------------------|---------------------|---|----------------|
| One Shot Falling Edge | Multifunction Timer | Upon application of input voltage, the time delay relay is ready to accept trigger signals. When the trigger switch closes, the relay remains in its shelf state. When the trigger switch opens, the relay contacts change state and a pre-set time delay begins. At the end of the time delay, the relay contacts return to their shelf state unless the trigger switch closes and opens before the time delay elapses. Continuous cycling of the trigger signal at a rate faster than the time delay causes the relay to remain in its changed state. | |
| | JCK70 | | |
| Watchdog | Multifunction Timer | Upon application of input voltage, the time delay relay is ready to accept trigger signals. When the trigger switch closes, the relay contacts change state and the pre-set time delay begins. At the end of the time delay, the relay contacts return to their shelf state unless the trigger switch closes and opens before the time delay elapses. Continuous cycling of the trigger signal at a rate faster than the delay time causes the relay to remain in its changed state. | |
| | JCK70 | | |
| Trigger On Delay | Multifunction Timer | Upon application of input voltage, the time delay relay is ready to accept trigger signals. When the trigger switch closes, a pre-set time delay begins. At the end of the pre-set time delay, the relay contacts change state and remain in that position as long as either the trigger signal is maintained or the input voltage remains. If the trigger switch opens during the time delay, the relay contacts return to their shelf state. | |
| | JCK70 | | |

Programmable Timing Ranges for Type JCK60 and JCK70 Relays

Table 2: Application Data

| JCK60 and JCK70 Timing Ranges | |
|-------------------------------|-------------------|
| 0.01 s | 0.05–9.99 seconds |
| 0.1 s | 0.1–99.9 seconds |
| S | 1–999 seconds |
| 0.1 m | 0.1–99.9 minutes |
| M | 1–999 minutes |
| 0.1 h | 0.1–99.9 hours |
| H | 1–999 hours |

JCK60 and JCK70 LED Indicators

Table 3: LED Indicators

| LED | State |
|-------------|------------------|
| Steady (On) | Power present |
| Flashing | Device is timing |

NOTE: The LED is not an indicator of the output state of the timing relay.

Wiring Diagrams

NOTE:

1. The timing relays are not compatible with two-wire AC input sensors. A hard contact relay (for instance, a general-purpose relay) must be interposed.
2. Do not apply DC voltage to the 240 Vac timers.
3. Use the same voltage for the power trigger and control power. Do not use terminal 6 with power trigger devices.
4. For timers that use trigger switches, the maximum distance for the trigger switch is 50 ft. from the timer.

Figure 1: JCK11-19; JCK1F•
JCK31- 39; JCK3F•
JCK51-59, JCK5F•, and JCK60

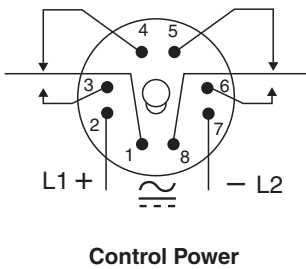


Figure 2: JCK21-29; JCK2F•
JCK41-49; JCK4F•

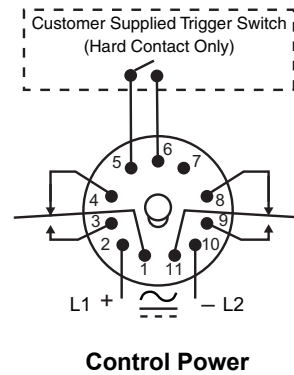


Figure 3: JCK21PT-29PT; JCK2F•PT
JCK41PT-49PT; JCK4F•PT


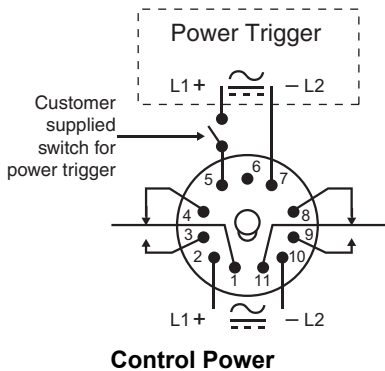


Figure 4: JCK70

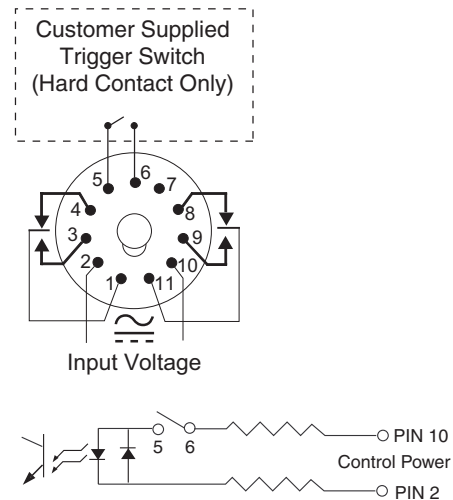

Schneider Electric USA, Inc.
8001 Knightdale Blvd
Knightdale, NC 27545
1-888-778-2733
www.schneider-electric.us

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

Square D™ and Schneider Electric™ are trademarks or registered trademarks of Schneider Electric. Other trademarks used herein are the property of their respective owners.